

DNP

DIGITAL PHOTO PRINTER

DP-DS620

DP-DS620 (A)

Printer Driver User's Manual

For Windows Vista

- **Safety precautions**

Before you use the printer, carefully read the User's manual to ensure that you use the printer correctly. Be aware that the content complies with the standards at the time the User's manual section related to safety, including usage and safety precautions, was created.

- **Modifications**

For product safety, it is prohibited to modify the DP-DS620/DP-DS620 (A) printer, DP-DS620/DP-DS620 (A) printer driver, and CD contents.

- **Copyright**

The copyrights, trademark rights, and other intellectual property rights related to documents and programs included with this product are the property of Dai Nippon Printing Co., Ltd. and other rights holders. You cannot copy and use these items without the permission of Dai Nippon printing Co., Ltd. except where permitted by applicable laws.

Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and in other countries.

LEADTOOLS Copyright (C) 2008 LEAD Technologies, Inc.

- **About the country of delivery**

Not for resale/use in the U.S. Inside the U.S., use : DP-DS620 (A)

Table of contents

Chapter 1	Installation	1
1.1	Prepare the printer and computer	1
1.2	Found New Hardware Wizard	1
1.3	Install using "Add a Printer"	6
Chapter 2	Properties	12
2.1	Open the printer properties	12
2.2	Print settings functions	14
2.2.1	Layout	14
2.2.2	Advanced options	15
2.2.3	Paper/Quality	20
2.2.4	Option	20
2.2.5	Color Adjustment	22
2.2.6	Printer Information	23
2.3	Default values for settings	25
2.4	Color management	26
2.5	Print Area	27
2.6	Print Orientation	28
Chapter 3	Update the driver	29
Chapter 4	Delete the driver	35

Main additional functions from previous models

- Added "(6x4) x N" and "(5x3.5) x N" to the paper sizes (limited to applicable countries)
Added "(6x4) x n" and "(5x3.5) x n" to reduce ribbon consumption by printing at (6x4) and (5x3.5) sizes using the winding print function.
For details, see "Paper size (6x4) x n setting" in 2.2.2 Advanced options.
- Added printer information
Added a printer information function to display, for example, printer information and the status/number of printable copies on the driver screen.
For details, see 2.2.6 Printer Information.
- Added language settings
Added a function to change the display language for the following print settings: Advanced options-Printer functions, Paper options, Color Adjustment, and Printer Info.
For details, see 2.2.4 Option.

Chapter 1 Installation

1.1 Prepare the printer and computer

Switch on the power of the DP-DS620 printer, and then use a USB cable to connect the printer and computer.

*For the connection, see the user's manual of the DP-DS620.

Note) Do not insert the included CD at this time.

Log in as an administrator. The following explanation presumes that the operations are carried out with administrator privileges.

If the Found New Hardware Wizard appears after connection, carry out the installation by following the procedure of "1.2 Found New Hardware Wizard". If the Found New Hardware Wizard does not appear, carry out the installation by following "1.3 Install using "Add a Printer"".

1.2 Found New Hardware Wizard

The Found New Hardware Wizard starts. Click "Locate and install driver software (recommended)".

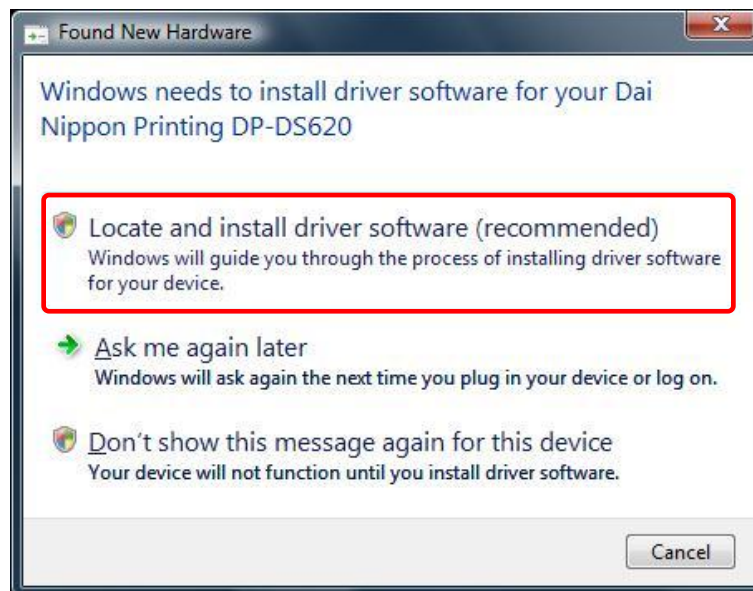


Figure 1.1 Found New Hardware Wizard

Note) A User Account Control dialog box appears stating "Windows needs your permission to continue". Click Continue.

A screen appears requesting Insert the disc that came with your Dai Nippon Printing DP-DS620. Click "I don't have the disc. Show me other options".

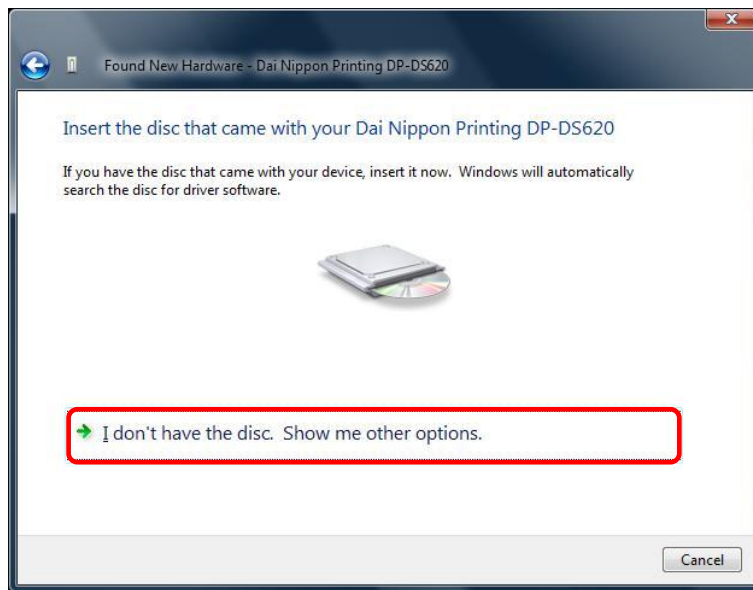


Figure 1.2 Insert the disc

The Windows couldn't find driver software for your device screen appears. Click "Browse my computer for driver software (advanced)".

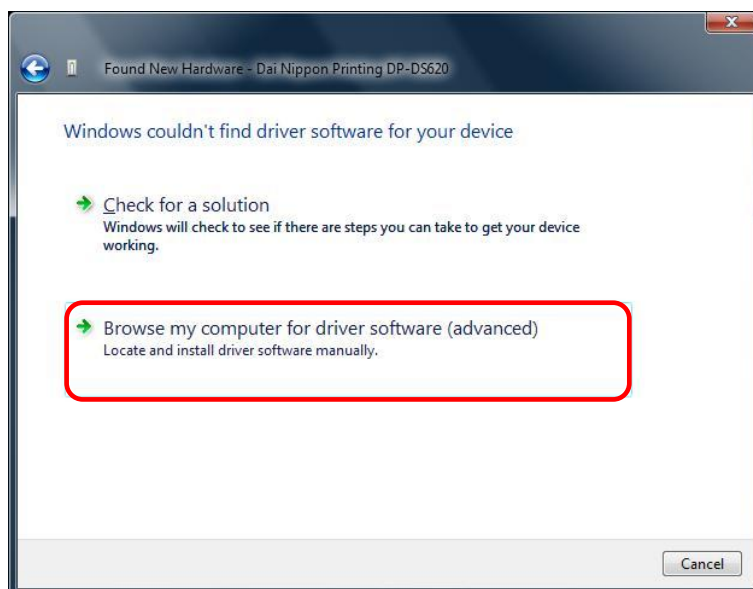


Figure 1.3 Windows couldn't find driver software for your device screen

Note) Insert the included CD now.

The Browse for driver software on your computer screen appears. Click "Browse", select the installation location, and then click "Next".

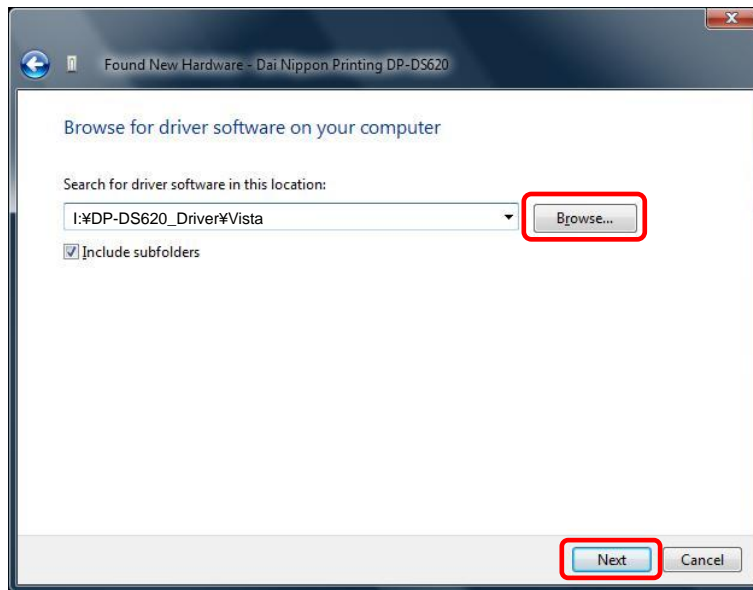


Figure 1.4 Setting the location for the driver software

A Windows Security confirmation screen appears. Click "Install this driver software anyway".



Figure 1.5 Windows Security confirmation screen

The driver software is installed.

"The software for this device has been successfully installed" screen appears. Click "Close". The wizard closes.



Figure 1.6 Installation Complete screen

Click "Start", and then click "Control Panel" to open the Control Panel. In Control Panel, click "Printer".

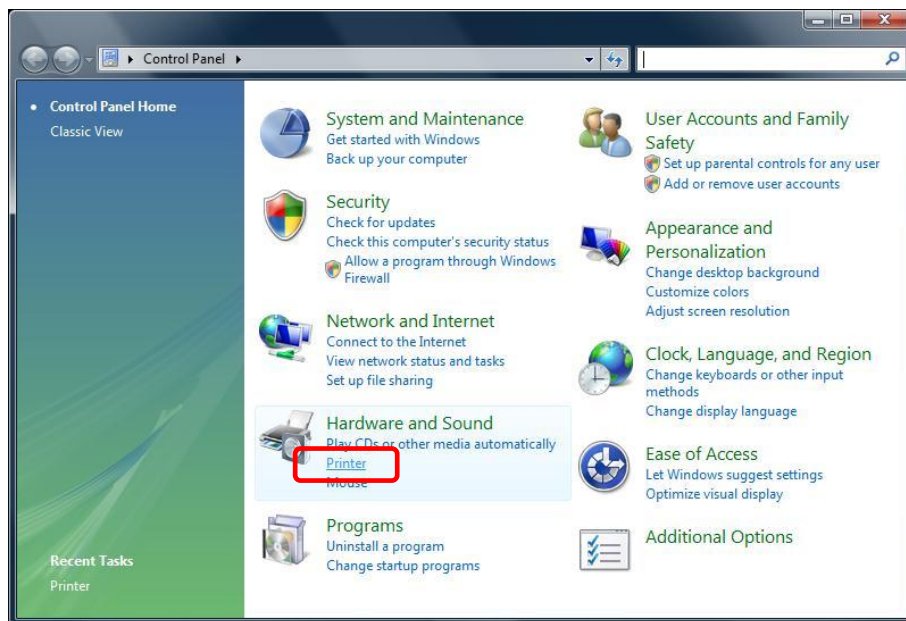


Figure 1.7 Control Panel

In Printers, make sure that "DP-DS620" is present.
This completes installation of the DP-DS620 printer driver.

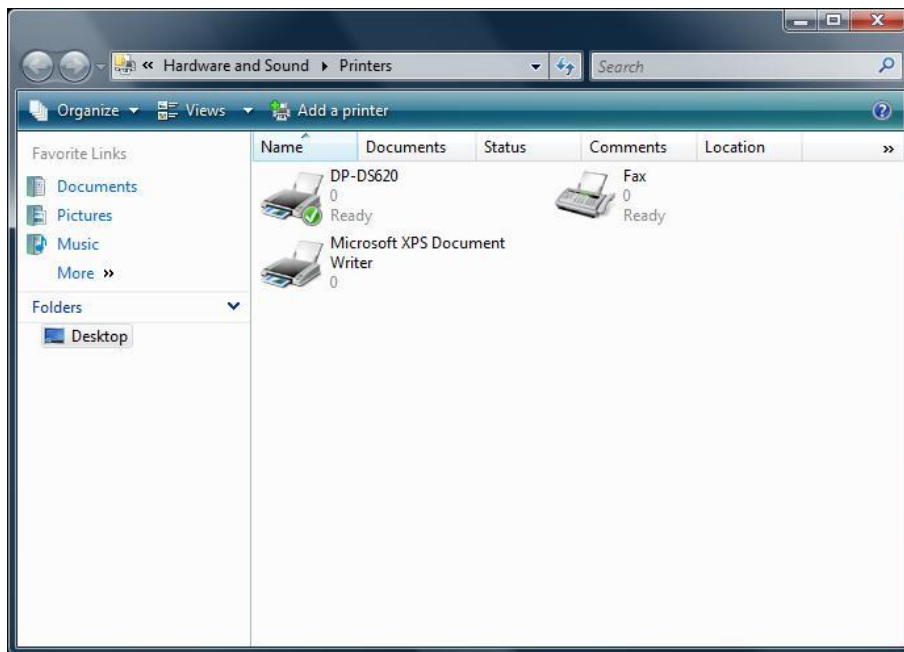


Figure 1.8 Printers

After the installation of the printer driver is complete, always restart the computer.

1.3 Install using "Add a Printer"

Click "Start", and then click "Control Panel" to open the Control Panel. In Control Panel, click "Printer".

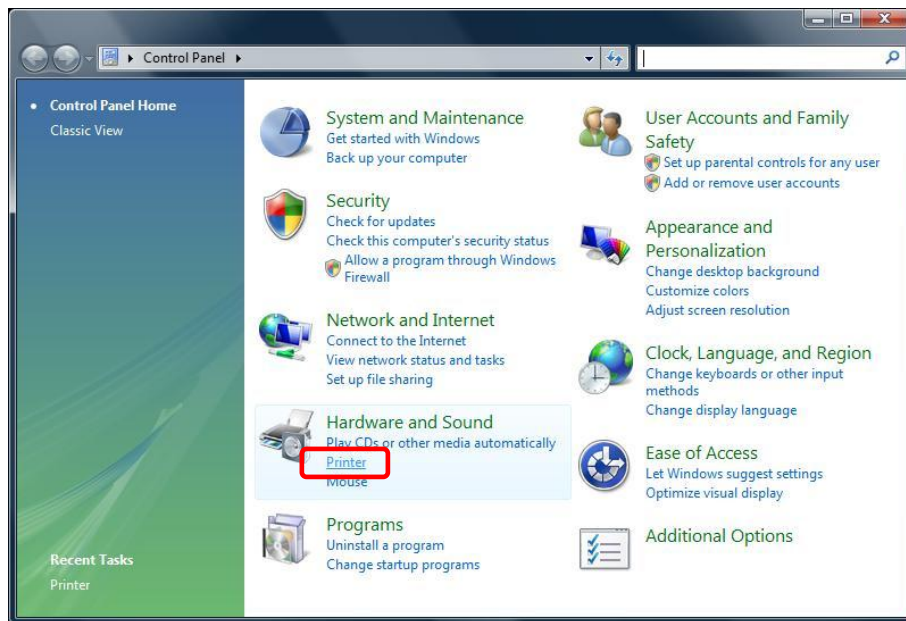


Figure 1.9 Control Panel

From the top menu bar of Printers, click "Add a Printer".

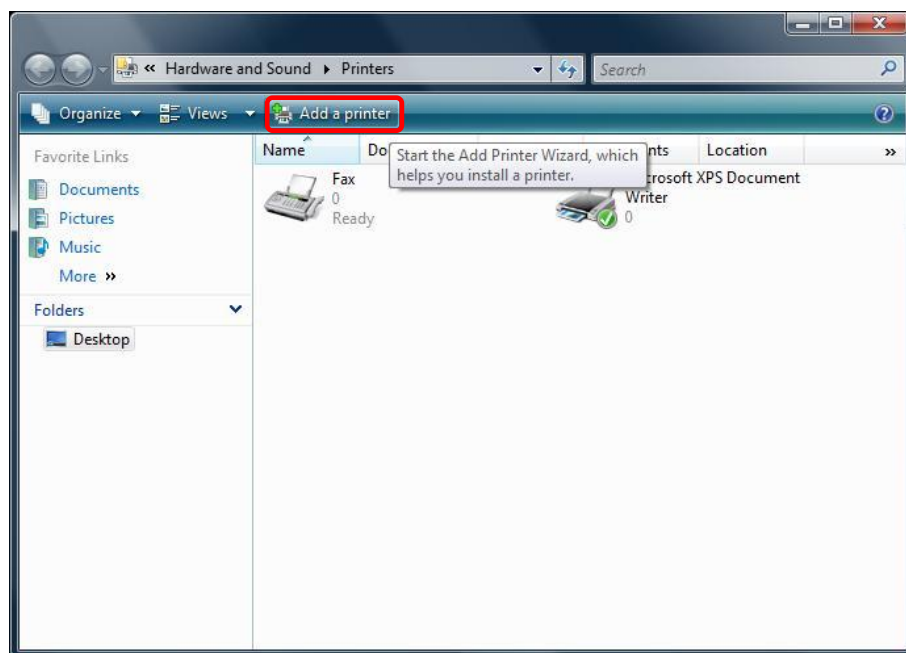


Figure 1.10 Printers

The Choose a local or network printer screen appears. Select "Add a local printer", and then click "Next".

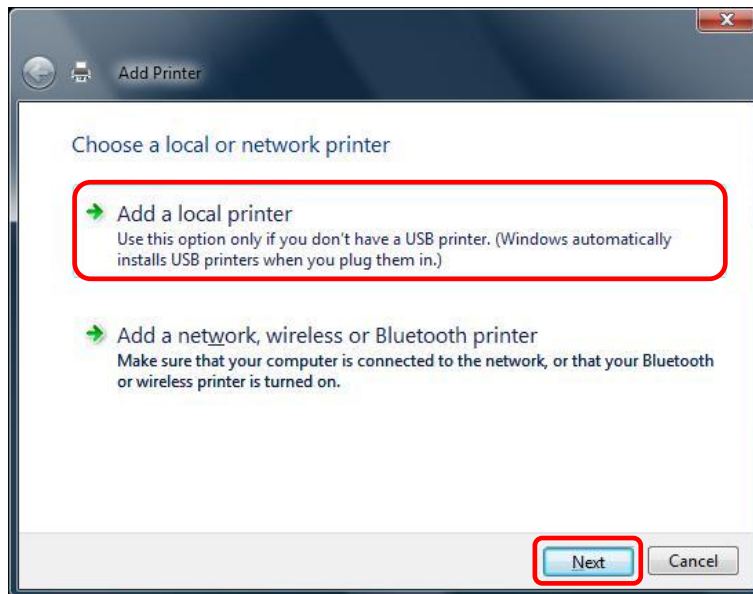


Figure 1.11 Choose a local or network printer screen

The Choose a printer port screen appears. Select "Use an existing port". From the list, select the USB port connecting the printer (for example, USB001), and then click "Next".

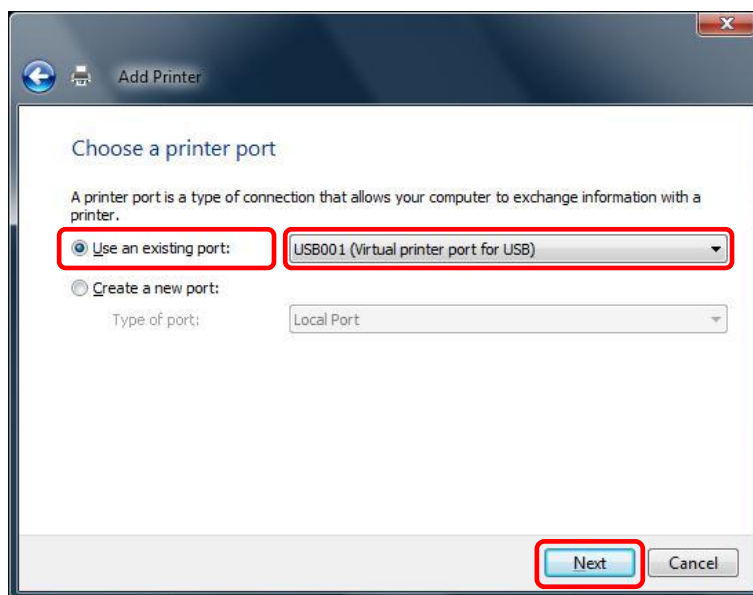


Figure 1.12 Choose a printer port screen

The Install the printer driver screen appears. Click "Have Disk...".

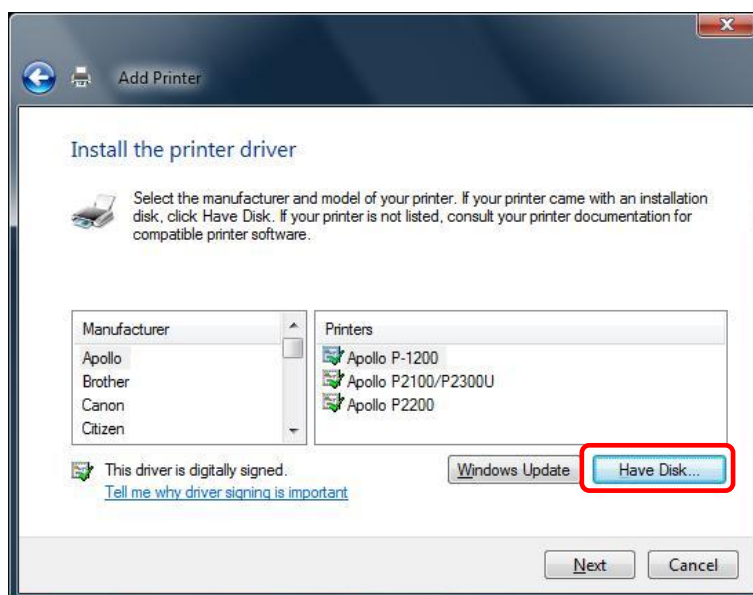


Figure 1.13 Install the printer driver screen

The Install From Disk screen appears. Click "Browse", select the installation location, and then click OK.

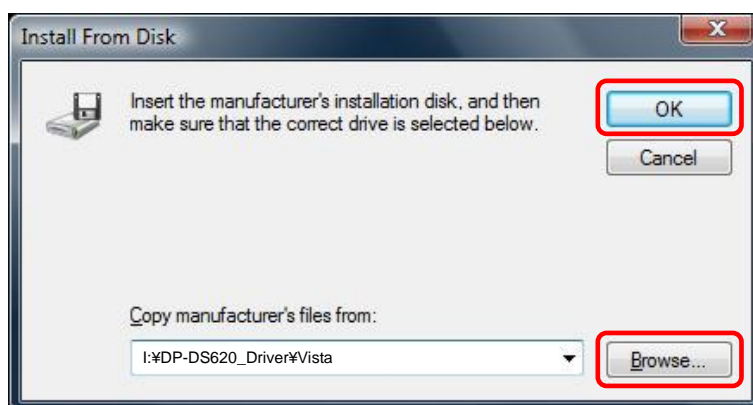


Figure 1.14 Install From Disk screen

Make sure that "DP-DS620" appears in the Install the printer driver screen, and then click "Next".

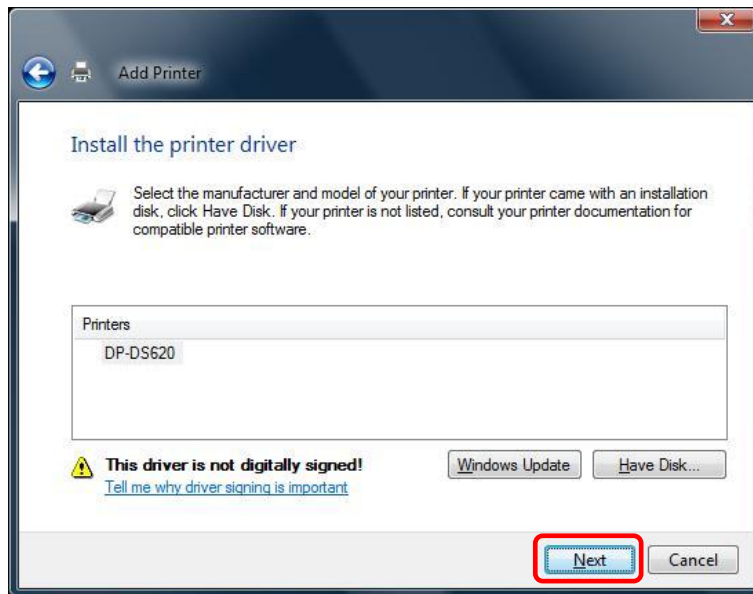


Figure 1.15 Install the (DP-DS620) printer driver screen

The Type a printer name screen appears. Configure the printer name. Furthermore, if you want to set this printer as the default printer, select "Set as the default printer" check box, and then click "Next".



Figure 1.16 Type a printer name screen

Note) The installation starts, but a User Account Control dialog box appears stating "Windows needs your permission to continue". Click Continue.

A Windows Security confirmation screen appears. Click "Install this driver software anyway".



Figure 1.17 Windows Security confirmation screen

The You've successfully added DP-DS620 screen appears. Click Finish.

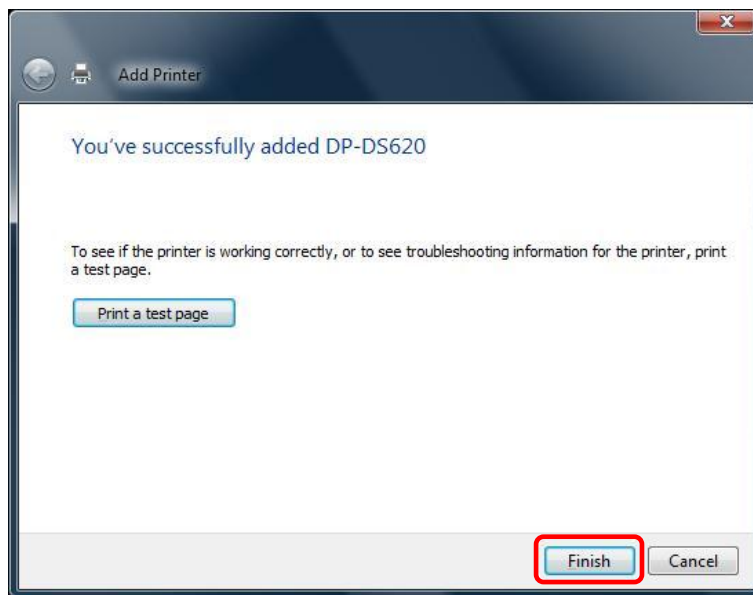


Figure 1.18 You've successfully added DP-DS620 screen

In Printers, make sure that "DP-DS620" is present.
This completes installation of the DP-DS620 printer driver.

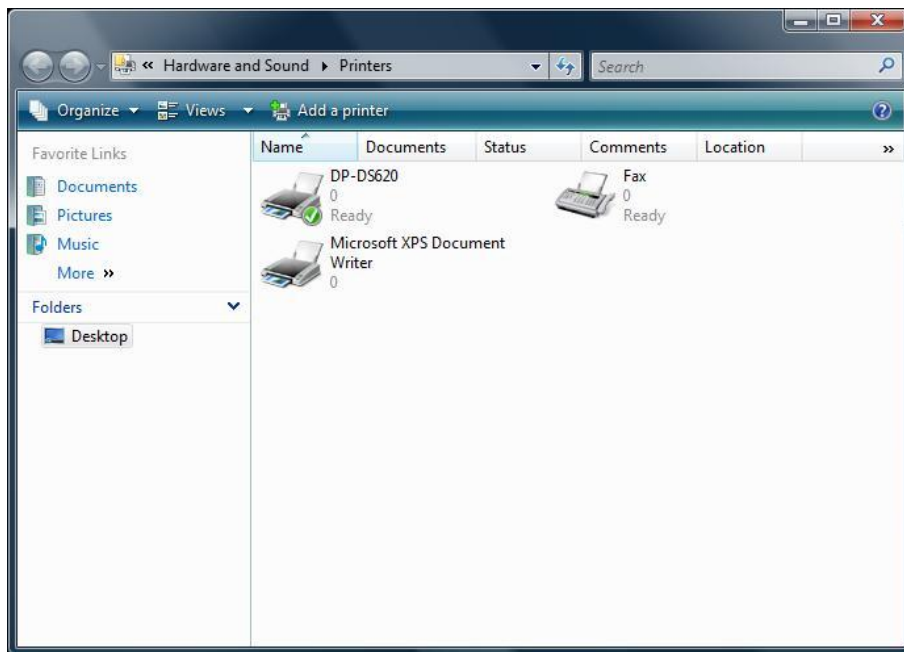


Figure 1.19 Printers


After the installation of the printer driver is complete, always restart the computer.

Chapter 2 Properties


You can configure various printer settings from the Properties of the DP-DS620 driver. Make sure you understand the contents well before changing settings. To use the properties, log in as an administrator. Depending on the application you are using, you must perform this operation from the print settings of the application.

2.1 Open the printer properties


1. Click "Start", and then click "Control Panel" to open the Control Panel.

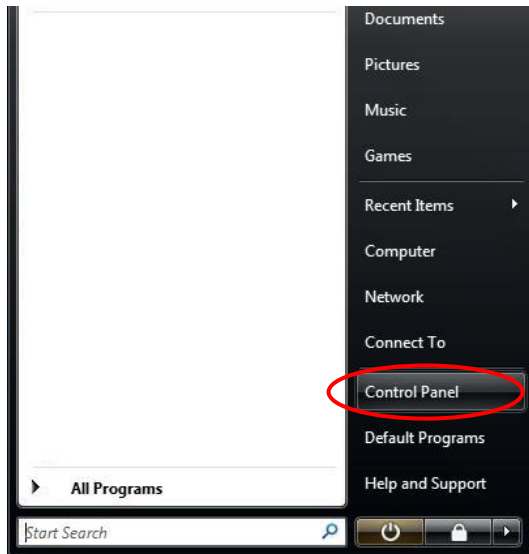


2. From Control Panel, click "Printer" to open the Printers window

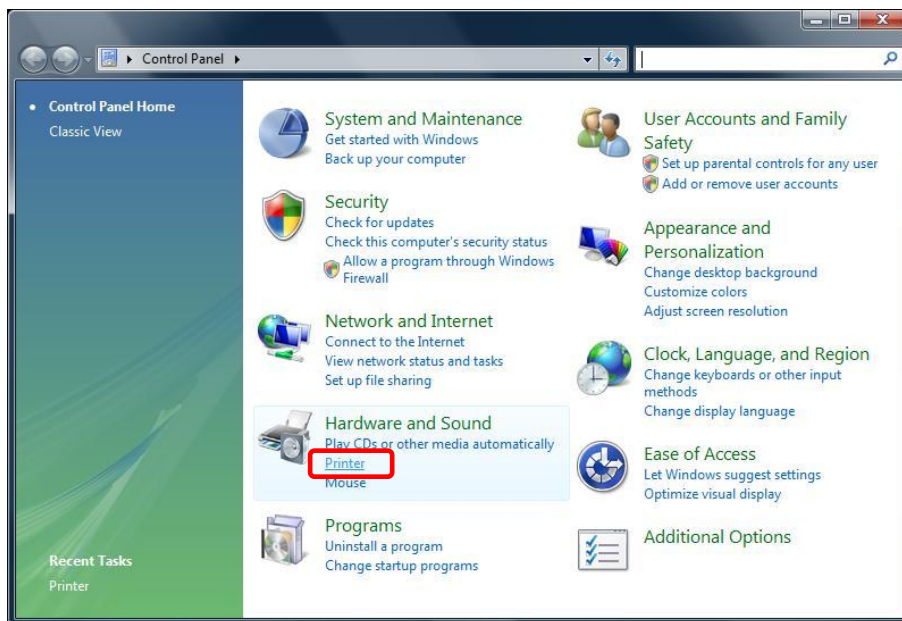

3. Right click the DP-DS620 icon. From the menu, click "Properties" to open the Properties dialog box.

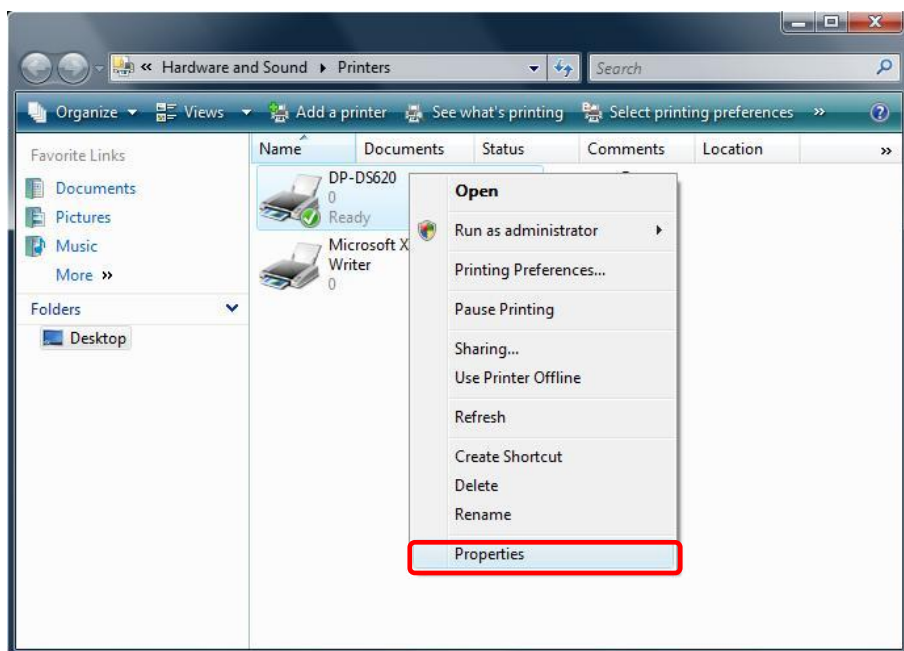

4. The DP-DS620 Properties screen appears.

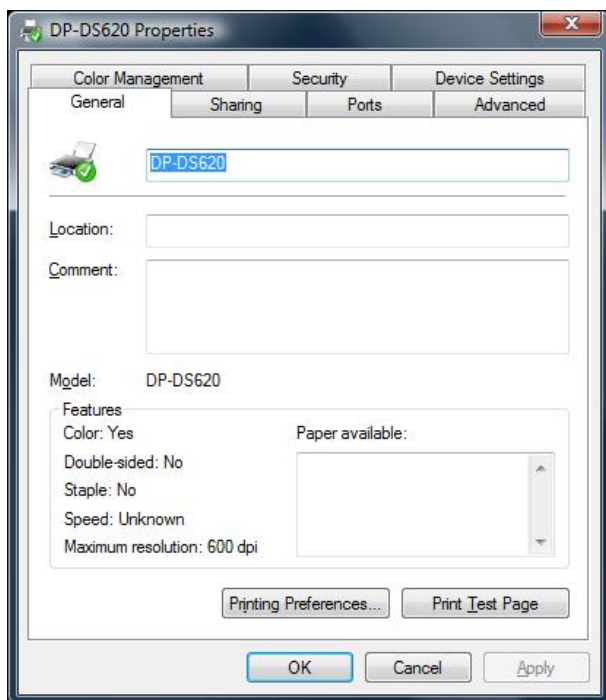

2.2 Print settings functions

If you select the basic settings from the Properties screen, you can change various print settings.

2.2.1 Layout

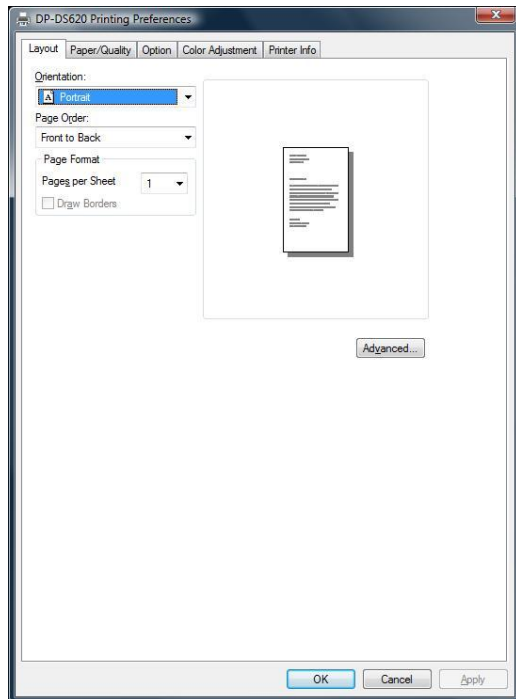


Figure 2.2.1 Layout tab


Orientation

Set the print orientation to "Portrait" or "Landscape".
For details, refer to "2.6 Orientation".

Page Order

In the application, specify the order when multiple copies of an image are printed.

Example) Print order

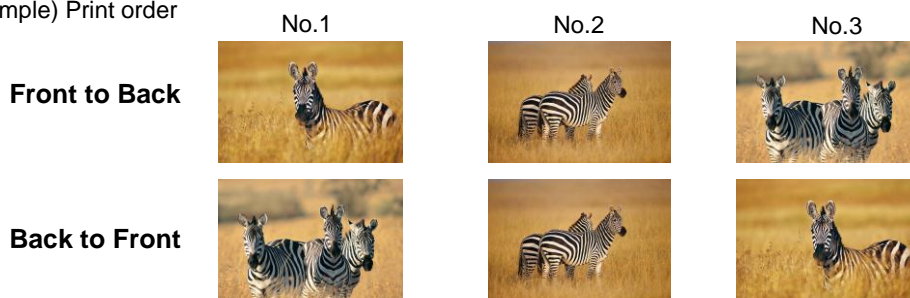

Pages per Sheet

Set printing of the specified division size. In most situations, set "1".

Example) Division size



2.2.2.2 Advanced options

If you select "Advanced..." on the Layout tab, you can configure various advanced options.

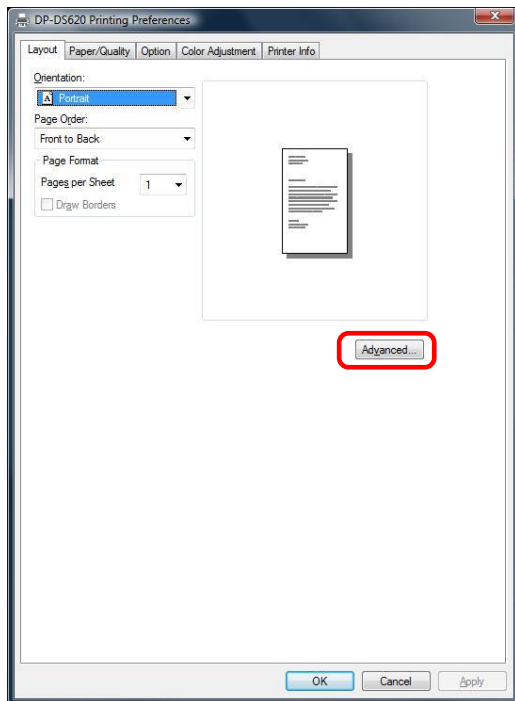


Figure 2.2.2.1 Advanced settings

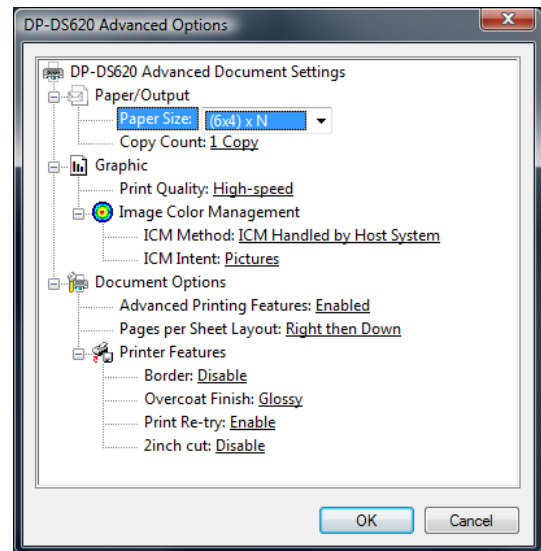


Figure 2.2.2.2 Advanced options tab

Paper Size

Specify the paper size. Match the paper size with the size of the media set in the printer.
You can enable multiple layout settings by setting the paper size. See later sections for details.

Copy Count

You can specify the number of copies to be published for images.

Print Quality

Specify the resolution.

Print Quality	Function
High-speed	Print using high speed mode
High-quality	Print using high quality mode

ICM Method

ICM Method	Function
ICM Disabled	Synchronized with "Color Adjustment Disabled" in 2.2.4 Option.
ICM Handled by Host System	Synchronized with "Color Adjustment ICM" in 2.2.4 Option. Manage colors using the driver.
ICM Handled by Printer	When this item has been selected, operation is the same as "ICM Handled by Host System".

ICM Intent

Set the rendering method when using ICM. For the ICC profile, always set to "Pictures".
Do not use other settings.

Advanced Printing Features

Always set Enable. Do not use other settings.

Pages per Sheet Layout

Set the layout direction of an image when the Pages per Sheet setting is set for multiple divisions.

Border

Synchronized with Border in the Option.

Overcoat Finish

Set the overcoat finish method for the surface of printed items from the following two types.

Overcoat Finish	Function
Glossy	Create an item with a glossy finish.
Matte	Create an item with a matte finish.

Print Re-try

Specify whether to print data in the printer buffer after a printer error has been cleared.

Print Re-try	Function
Disable	Clear the print data in the printer buffer when a printer error occurs. You must send the cleared print data again after the error is cleared. When you use an application with an error recovery function, select this option.
Enable	Save print data in the printer buffer when an error occurs. The printing process is restarted from the saved data after the error is cleared. Note that if the power is switched off, the data is not saved.

Depending on the content of the printer error, it may be necessary to restart the printer to clear the error. In such cases, the print data in the printer buffer is cleared regardless of the Print Re-try setting.

The following section shows the operation for each Print Re-try setting by error.

Error content	When Print Re-try is disabled	When Print Re-try is enabled
Paper end	You must send the unprinted image data again after the error is cleared.	The printing process is restarted from the data saved in the printer buffer after the error is cleared. When the paper initialization operation is to be carried out, printing occurs afterwards.
Ribbon end		
Cover open		
Paper jam (*1)		
Ribbon error (*1)		
Paper setting error		
Data error	Because the printer must be switched on and off to clear the error, the print data in the printer buffer is cleared regardless of the Print Re-try setting.	Because the printer must be switched on and off to clear the error, the print data in the printer buffer is cleared by switching the printer off, even when the Print Re-try setting is Enabled.
Head voltage error		
Head position error		
Power supply fan stopped		
Cutter error		
Head temperature error	After the printer has restarted, you must send the unprinted image data again.	After the printer has restarted, you must send the unprinted image data again.
Media temperature error		
RFID module error		
System error		

*1: After the printer stops due to an error, follow the user's manual of the printer to eliminate the cause of the paper or ribbon error.

2inch cut

Specify whether to cut paper into multiple sheets with a 2-inch length when you use a specified paper size.

2inch cut	Function
Disable	Cut at the normal size.
Enable	Cut at 2-inch lengths so that the 6 x 4 size becomes two sheets and the 6 x 8 size becomes four sheets.

< Multiple layout >

When 5 x 7 or 6 x 8 media is used, you can use a two-picture layout. You can enable multiple layout settings by setting the paper size of the printer driver. The following section shows the image sizes.

Layout settings

Driver paper size setting	Paper direction	Paper size length x height (mm)	Media used
(5x3.5) x 2	Vertical	(131.1x 92.1) x 2	5x7
(5x3.5) x N	Horizontal	(92.1x131.1) x 2	
PR (3.5x5) x 2	Vertical	(92.1x131.1) x 2	5x7
PR (3.5x5) x N	Horizontal	(131.1x 92.1) x 2	
(6x4) x 2	Vertical	(156.1x105.0) x 2	6x8
(6x4) x N	Horizontal	(105.0x156.1) x 2	
PR (4x6) x 2	Vertical	(105.0x156.1) x 2	6x8
PR (4x6) x N	Horizontal	(156.1x105.0) x 2	


Multiple layout is carried out under the following conditions.

1. Set 5 x 7 or 6 x 8 size media in the printer.
2. Set the paper size of the printer driver to one of the abovementioned paper sizes.
3. From the application, send multiple images.

Note) Because they are carried out by the print job, multiple layout are carried out when there are multiple images in a single job.

If you want to layout the same image, send the same number of images as the number-of-sheets setting.

The printer handles two pictures at one time and cuts the paper after it is ejected.

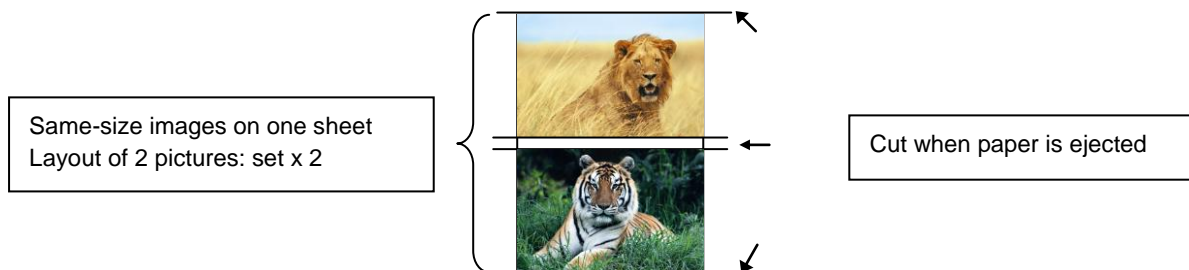

























< Paper size (6x4) x N setting >

If you set the paper size setting to (6 x 4) x N when printing 6 x 4 size to 6 x 8 size media, printing is optimized to reduce consumption of the ribbon. Furthermore, if you set the paper size setting to (5x3.5) x N when printing 5 x 3.5 size to 5 x 7 size media, printing is similarly optimized to reduce consumption of the ribbon.

The above operation applies only to the DP-DS620. When (6x4)xN is selected with the DP-DS620 (A), printing is performed the same as for (6x4)x2 without rewinding the ribbon. The same applies for (5x3.5)x2 even if (5x3.5)xN is selected.


The following section shows the differences in ribbon consumption when (6x4), (6x4) x 2, or (6x4) x N is specified for the paper size setting.

	(6x4)	(6x4) x 2	(6x4) x N
When printing one sheet at 6 x 4 size once	 Not used	 Not used	 Used for the next printing
			*After printing, the ribbon is rewound and adjusted to the next print position.
When printing one sheet at 6 x 4 size twice	  Not used	  	 
			*After the first sheet is printed, the ribbon is rewound, and the second sheet is printed.
When printing two sheets at 6 x 4 size once	 Not used	 	 
	 Not used	*Two sheets are printed at the same time in a multiple layout.	*Two sheets are printed at the same time in a multiple layout.
When printing one 6 x 4 size sheet once, and then printing two 6 x 4 size sheets once	 Not used	 	 
	 Not used	 	 Used for the next printing
	 Not used	*For the second and third sheets, two sheets are printed at the same time in a multiple layout.	*After the first sheet is printed, the ribbon is rewound, and the second and following sheets are printed. Furthermore, after the third sheet is printed, the ribbon is rewound and adjusted to the next print position.


< Application usage example >

This usage example uses Windows Explorer.


Step 1. In Windows Explorer, select two or more pictures.
Next, click "Print".

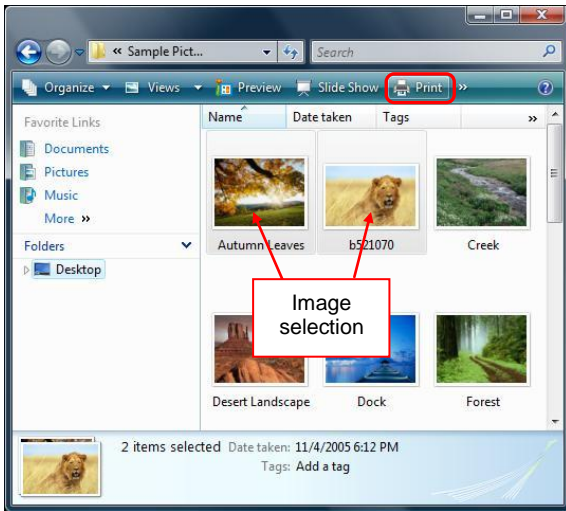


Step 2. Select the Fit picture to frame check box, and then click "Options".

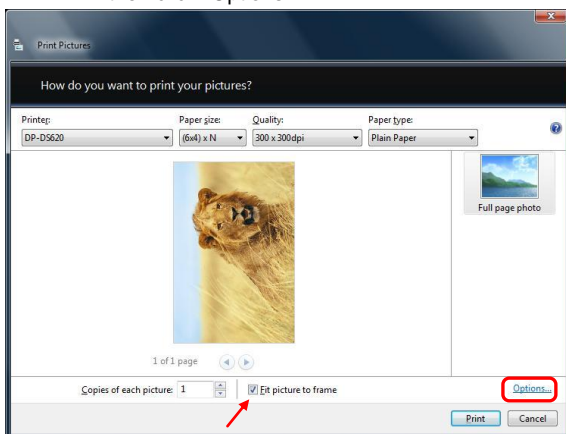

Step 3. Click "Printer Properties".

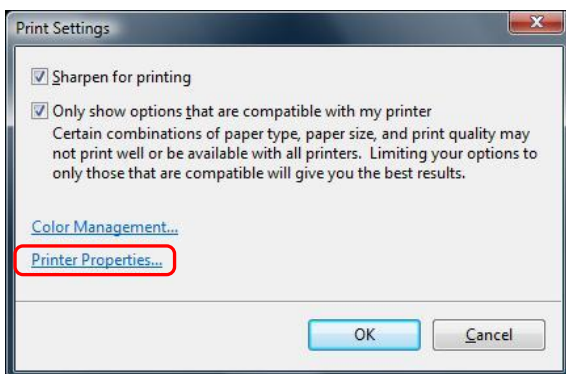


Step 4. Set the Orientation to "Portrait",
and click "Advanced...".

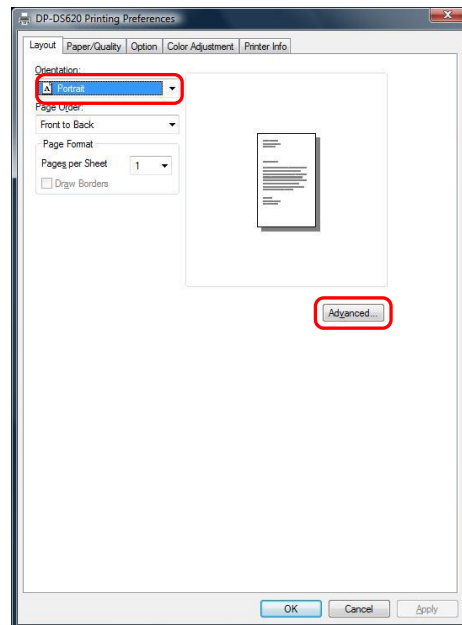


Step 5. Set the paper size to the setting of the multiple
layout.

Click OK twice to close the dialog boxes in Step 5
and 4.

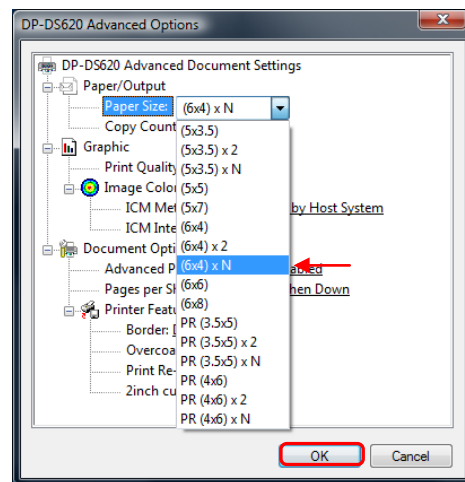

Step 6. Click "Print".

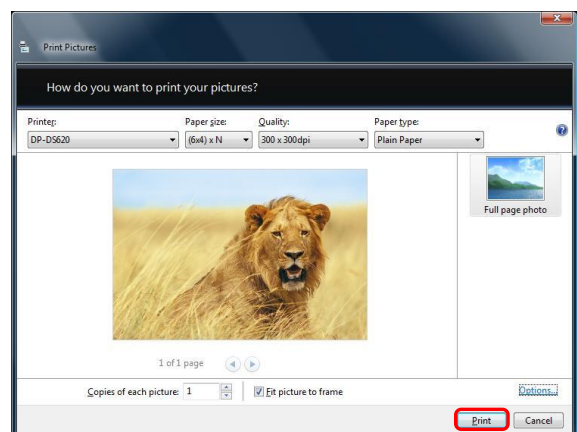

2.2.3 Paper/Quality

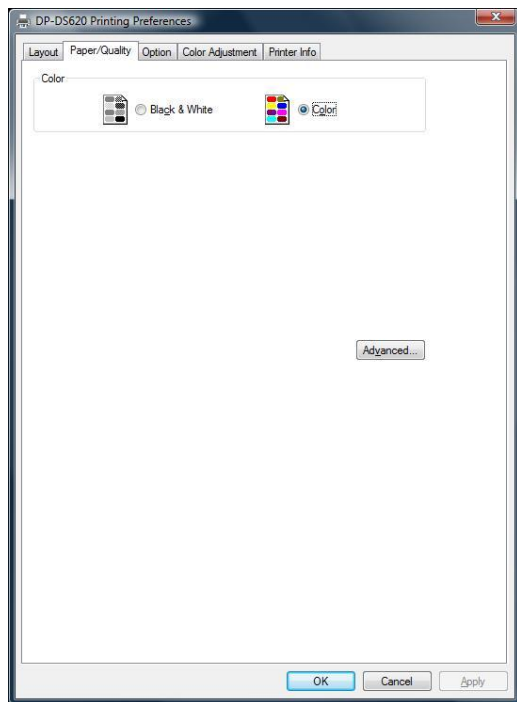


Figure 2.2.3 Paper/Quality tab

Color Set Color. Do not use black and white.

2.2.4 Option

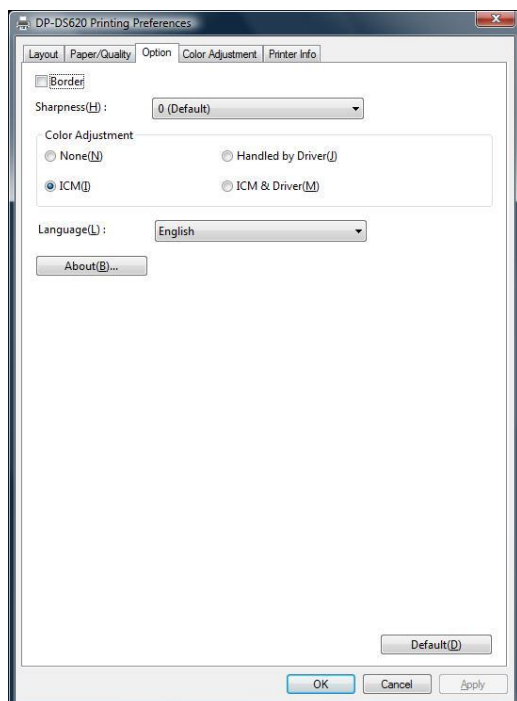


Figure 2.2.4.1 Option tab

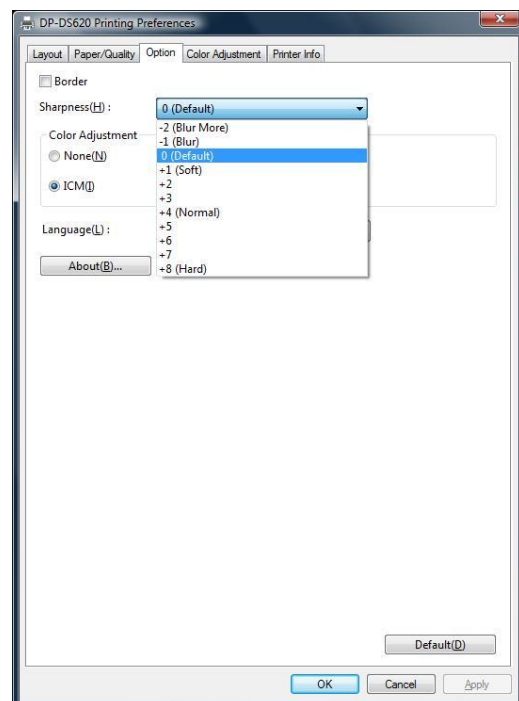


Figure 2.2.4.2 Sharpness setting

Border

Specify a border for printing. (Select the check box for a border.) Synchronized with Border Enable/Disable in the Advanced settings.

Sharpness

Process sharpness using one of the 11 stages (Figure 2.2.4.2). If the setting is "0 (Default)", sharpness is not processed.

Moving to the minus (-) side blurs the image and moving to the plus (+) side sharpens the image.

Color Adjustment**None**

Synchronized with the ICM Method in the Advanced settings. If this check box is selected, ICM is disabled, the Color adjustment tab is also disabled, and the printer driver does not carry out color adjustment.

Handled by Driver

If this check box is selected, ICM is disabled, and the 2.2.5 Color Adjustment is enabled. The result is applied to the adjustment values of the following items: Gamma, Brightness, Contrast, and Chroma.

ICM

Synchronized with the ICM Method of the Advanced settings (ICM Handled by Host System). If this check box is selected, the driver manages colors.

ICM & Driver

If this check box is selected, ICM (color management) and the 2.2.5 Color Adjustment are enabled.

Language

Change the display language for the following items: Advanced options-Printer functions, Option, Color Adjustment, and Printer Info.

The selected language is enabled the next time the print settings are displayed.

[Available languages]

- Japanese
 - English (US)
 - French (France)
 - German (Germany)
 - Russian (Russia)
 - Spanish (Spain)
 - Korean
 - Chinese (People's Republic of China)
 - Chinese (Taiwan)
- When your operating system environment corresponds with one of the above settings, the default display language is the language of the corresponding country.
Furthermore, when your operating system environment does not correspond with one of the above settings, the default display language is English.
- To use a language different from that of your operating system, you must install the following font for the corresponding language.

Language	Font
Japanese	Meiryo (メイリオ)
English (US)	Segoe UI
French (France)	Segoe UI
German (Germany)	Segoe UI
Russian (Russia)	Segoe UI
Spanish (Spain)	Segoe UI
Korean	Malgun Gothic (맑은 고딕)
Chinese (People's Republic of China)	Microsoft YaHei (微软雅黑)
Chinese (Taiwan)	Microsoft JhengHei (微軟正黑體)

About

Show the driver version.

2.2.5 Color Adjustment

If the Handled by Driver check box is selected in the 2.2.4 Option, the adjustment values of the Color Adjustment tab are applied to the image.

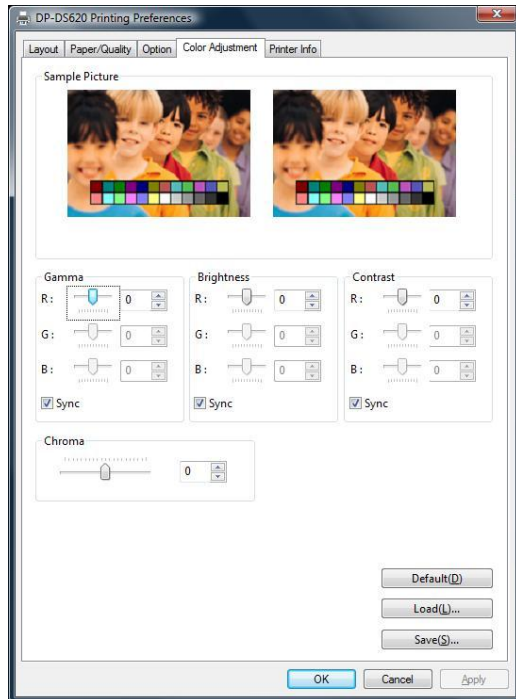


Figure 2.2.5 Color Adjustment tab

The following section shows the setting ranges on the Color Adjustment tab.

Adjustment item	Adjustment value
Gamma	-100 (dark) to 100 (bright) ("0" results in no adjustment, $\gamma 2.0$ to 0.5) Adjust the density of the half-tone section of the image. Increasing the gamma value brightens the half-tone section. Sync check box ON: Set RGB to same value. OFF: Set RGB to different value.
Brightness	-100 (dark) to 100 (bright) ("0" results in no adjustment) Adjust the brightness of the image. Increasing the brightness value brightens the entire image. Sync check box ON: Set RGB to same value. OFF: Set RGB to different value.
Contrast	-100 (weak) to 100 (strong) ("0" results in no adjustment) Adjust the contrast of the image. Increasing the contrast value increases the difference of brightness and darkness. Sync check box ON: Set RGB to same value. OFF: Set RGB to different value.
Chroma	-100 (weak) to 100 (strong) ("0" results in no adjustment) Adjust the chroma of the image.

2.2.6 Printer Information

View the printer information.

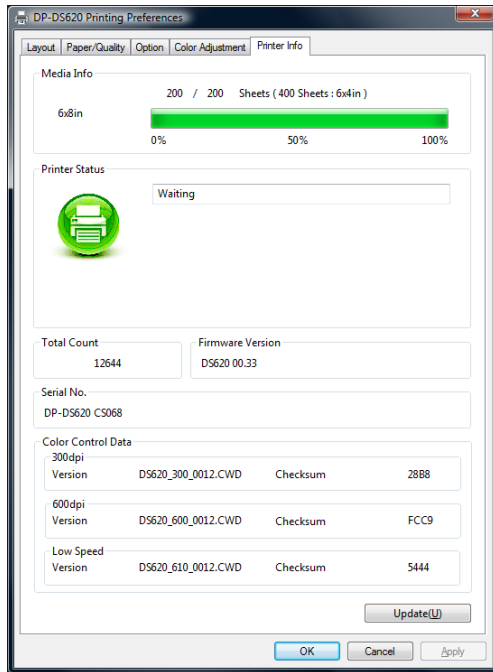


Figure 2.2.6.1 Printer Info tab

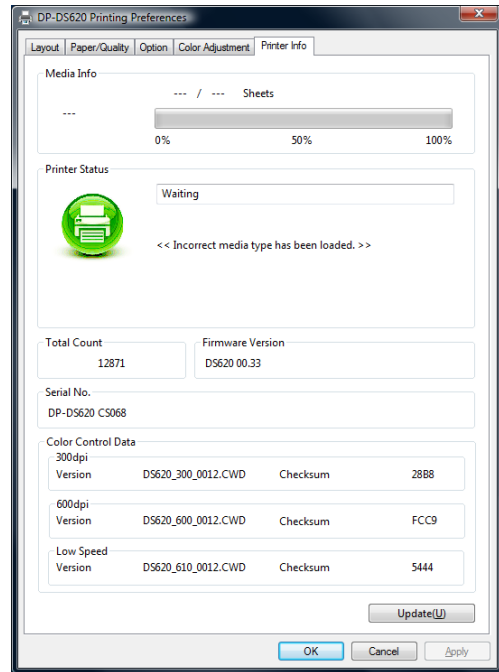



































Figure 2.2.6.2 Display when incorrect media is loaded

The following section shows the information displayed in the Printer Info tab.

Display item	Display details																		
Media Info	<p>This area shows, for example, the size and remaining number of printable sheets for the ribbon media in the printer.</p> <p>* Media information is not displayed when a media type not supported by the printer has been loaded. (Figure 2.2.6.2)</p>																		
Printer Status	<p>Displays the status of the printer using icons and characters.</p> <table><tr><th>Display icon (Color)</th><th>Display characters</th><th>Status/Response</th></tr><tr><td> (Green)</td><td>Waiting</td><td>Printing is possible.</td></tr><tr><td> (Blue)</td><td>Printing</td><td>The printer is printing.</td></tr><tr><td> (Yellow)</td><td>Door open</td><td>Front door is open. Close the front door.</td></tr><tr><td> (Yellow)</td><td>Ribbon end</td><td>No ribbon remains. Load new media. (Replace the paper and ribbon as a set.)</td></tr><tr><td> (Yellow)</td><td>Paper end</td><td>No paper remains. Load new media. (Replace the paper and ribbon as a set.)</td></tr></table>	Display icon (Color)	Display characters	Status/Response	 (Green)	Waiting	Printing is possible.	 (Blue)	Printing	The printer is printing.	 (Yellow)	Door open	Front door is open. Close the front door.	 (Yellow)	Ribbon end	No ribbon remains. Load new media. (Replace the paper and ribbon as a set.)	 (Yellow)	Paper end	No paper remains. Load new media. (Replace the paper and ribbon as a set.)
Display icon (Color)	Display characters	Status/Response																	
 (Green)	Waiting	Printing is possible.																	
 (Blue)	Printing	The printer is printing.																	
 (Yellow)	Door open	Front door is open. Close the front door.																	
 (Yellow)	Ribbon end	No ribbon remains. Load new media. (Replace the paper and ribbon as a set.)																	
 (Yellow)	Paper end	No paper remains. Load new media. (Replace the paper and ribbon as a set.)																	

Display item	Display details																					
	<table><tr><th>Display icon (Color)</th><th>Display characters</th><th>Status/Response</th></tr><tr><td> (Gray)</td><td>Offline</td><td>The printer cannot be recognized. Connect the printer and computer, and then turn on the power.</td></tr><tr><td> (Purple)</td><td>Cooling head</td><td>The head is being cooled. Please wait a while. Printing will resume automatically.</td></tr><tr><td> (Orange)</td><td>Ribbon error</td><td>The ribbon is not set correctly. Reload the ribbon properly.</td></tr><tr><td> (Orange)</td><td>Paper size setting error</td><td>The printer settings and size of the installed ribbon do not match. Check the paper size setting and ribbon size.</td></tr><tr><td> (Orange)</td><td>Paper jam</td><td>A paper jam was detected. Remove the paper and reload it properly.</td></tr><tr><td> (Red)</td><td>System error</td><td>System error. Restart the printer and computer. If the printer does not recover after the restart, contact the service center.</td></tr></table>	Display icon (Color)	Display characters	Status/Response	 (Gray)	Offline	The printer cannot be recognized. Connect the printer and computer, and then turn on the power.	 (Purple)	Cooling head	The head is being cooled. Please wait a while. Printing will resume automatically.	 (Orange)	Ribbon error	The ribbon is not set correctly. Reload the ribbon properly.	 (Orange)	Paper size setting error	The printer settings and size of the installed ribbon do not match. Check the paper size setting and ribbon size.	 (Orange)	Paper jam	A paper jam was detected. Remove the paper and reload it properly.	 (Red)	System error	System error. Restart the printer and computer. If the printer does not recover after the restart, contact the service center.
	Display icon (Color)	Display characters	Status/Response																			
	 (Gray)	Offline	The printer cannot be recognized. Connect the printer and computer, and then turn on the power.																			
	 (Purple)	Cooling head	The head is being cooled. Please wait a while. Printing will resume automatically.																			
	 (Orange)	Ribbon error	The ribbon is not set correctly. Reload the ribbon properly.																			
	 (Orange)	Paper size setting error	The printer settings and size of the installed ribbon do not match. Check the paper size setting and ribbon size.																			
	 (Orange)	Paper jam	A paper jam was detected. Remove the paper and reload it properly.																			
	 (Red)	System error	System error. Restart the printer and computer. If the printer does not recover after the restart, contact the service center.																			
* A warning message is displayed when a media type not supported by the printer has been loaded.(Figure 2.2.6.2)																						
Total Count	Total count of printed sheets (printing other than 6x4 or 5x3.5 size will count as two sheets).																					
Firmware Version	Version of the control program of the printer. xx.xx indicates the version. • DS620A xx.xx (For the United States) • DS620 xx.xx (For other countries)																					
Serial No.	Serial number of the printer.																					
Color Control Data	Printer color control data.																					

2.3 Default values for settings

The following section shows the default values of the settings (at installation). If the settings have been changed, and the printer driver no longer operates normally, return to the default values shown below.

Note) Depending on the service pack of your operating system or your usage environment, the default values at installation may differ from those in the chart below.

Tab	Setting			Value	
Layout	Orientation			Portrait	
	Page Order			Front to Back	
	Pages Per Sheet			1	
Paper/Quality	Color			Color	
Option	Border			Disable	
	Sharpness			0 (Default)	
	Color Adjustment			ICM	
	Language setting			English	
Color Adjustment	Gamma			0	
	Brightness			0	
	Contrast			0	
	Chroma			0	
Advanced settings (In the Layout tab, click "Advanced...")	Paper/Output	Paper Size		(6x4)x N	
		Copy Count		1	
	Graphic	Print Quality		High-speed	
		Image color management	ICM Method		ICM Handled by Host System
			ICM Intent		Pictures
	Document options	Advanced Printing Features		Enable	
		Pages per Sheet Layout		Right then Down	
		Printer function	Border		Disable
			Overcoat Finish		Glossy
			Print Re-try		Enable
	2inch cut		Disable		

Chart 2.3 Default print settings

2.4 Color management

Use Color management to specify the color profile. The installer associates "DS620-R0.icc" by default.

Step 1. From the Printer Properties, select the Color Management tab, and then click "Color Management..."


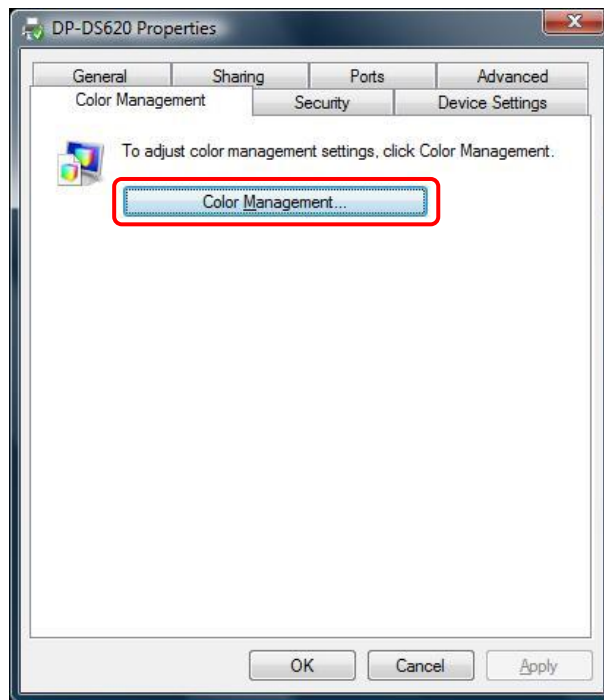


Figure 2.4 Color management tab

Step 2. From Device, select DP-DS620.



2.5 Print Area

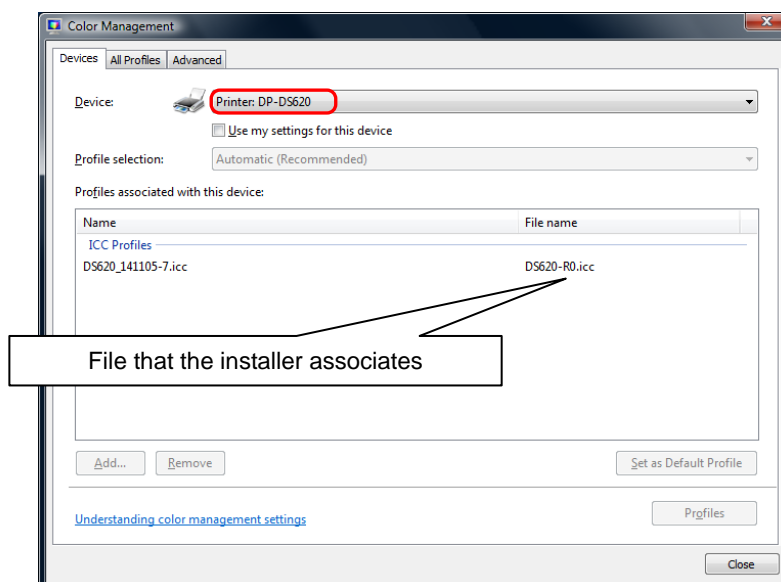





The following section shows the image sizes and numbers of dots generated by the paper size setting of the driver.

Paper size	Orientation	Image size (width x height)		Number of image dots (width x height)	
		(inch)	(mm)	High-speed (300x300 dpi)	High-quality (600x600 dpi)*1
(5x3.5) (5x3.5) x 2 (5x3.5) x N	Portrait	5" x 3.5"	131.1 x 92.1	1548 x 1088	3096 x 2176
	Landscape	3.5" x 5"	92.1 x 131.1	1088 x 1548	2176 x 3096
(5x5)	Portrait	5" x 5"	131.1 x 130.4	1548 x 1540	3096 x 3080
	Landscape	5" x 5"	130.4 x 131.1	1540 x 1548	3080 x 3096
(6x4) (6x4) x 2 (6x4) x N	Portrait	6" x 4"	156.1 x 105.0	1844 x 1240	3688 x 2480
	Landscape	4" x 6"	105.0 x 156.1	1240 x 1844	2480 x 3688
(6x6)	Portrait	6" x 6"	156.1 x 155.4	1844 x 1836	3688 x 3672
	Landscape	6" x 6"	155.4 x 156.1	1836 x 1844	3672 x 3688
(5x7)	Portrait	5" x 7"	131.1 x 181.0	1548 x 2138	3096 x 4276
	Landscape	7" x 5"	181.0 x 131.1	2138 x 1548	4276 x 3096
(6x8)	Portrait	6" x 8"	156.1 x 206.2	1844 x 2436	3688 x 4872
	Landscape	8" x 6"	206.2 x 156.1	2436 x 1844	4872 x 3688
PR (3.5 x 5) PR (3.5x5) x 2 PR (3.5x5) x N	Portrait	3.5" x 5"	92.1 x 131.1	1088 x 1548	2176 x 3096
	Landscape	5" x 3.5"	131.1 x 92.1	1548 x 1088	3096 x 2176
PR (4x6) PR (4x6) x 2 PR (4x6) x N	Portrait	4" x 6"	105.0 x 156.1	1240 x 1844	2480 x 3688
	Landscape	6" x 4"	156.1 x 105.0	1844 x 1240	3688 x 2480

*1: Convert to 300 x 600 dpi size within the driver, and then send to the printer.

2.6 Orientation

The following chart shows the relationship of images generated by an application and printed items (output direction) according to the orientation setting. Generated images are not the original image rotated by the application but are zoomed to fit within the sizes is shown in "2.5 Print Area".



Original image	Driver setting						
	Orientation	Paper setting					
		(5x3.5) (5x3.5) x 2 (5x3.5) x N (5x5) (6x4) (6x4) x 2 (6x4) x N (6x6)		PR (3.5x5) PR (3.5x5) x 2 PR (3.5x5) x N PR (4x6) PR (4x6) x 2 PR (4x6) x N		(5x7) (6x8)	
		Generated image	Printed item (Output orientation ↓)	Generated image	Printed item (Output orientation ↓)	Generated image	Printed item (Output orientation ↓)
	Vertical						
	Horizontal						
	Vertical						
	Horizontal						

Chapter 3 Update the driver

As when performing the installation, log in as an administrator before carrying out this operation.

1. Delete the driver

- 1) Before deleting the printer driver, close all applications. In addition, double click the icon of the printer you want to delete, make sure that there are no documents in the queue, and then start the deletion of the driver.

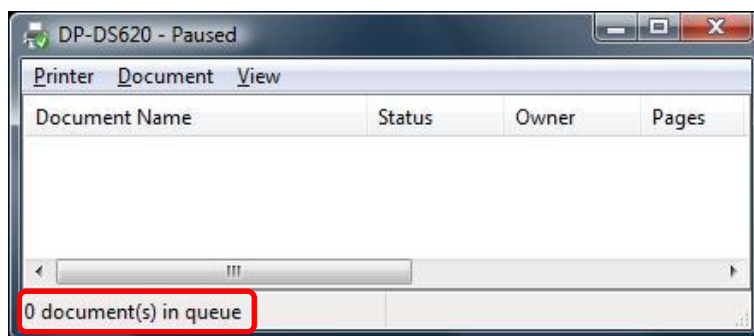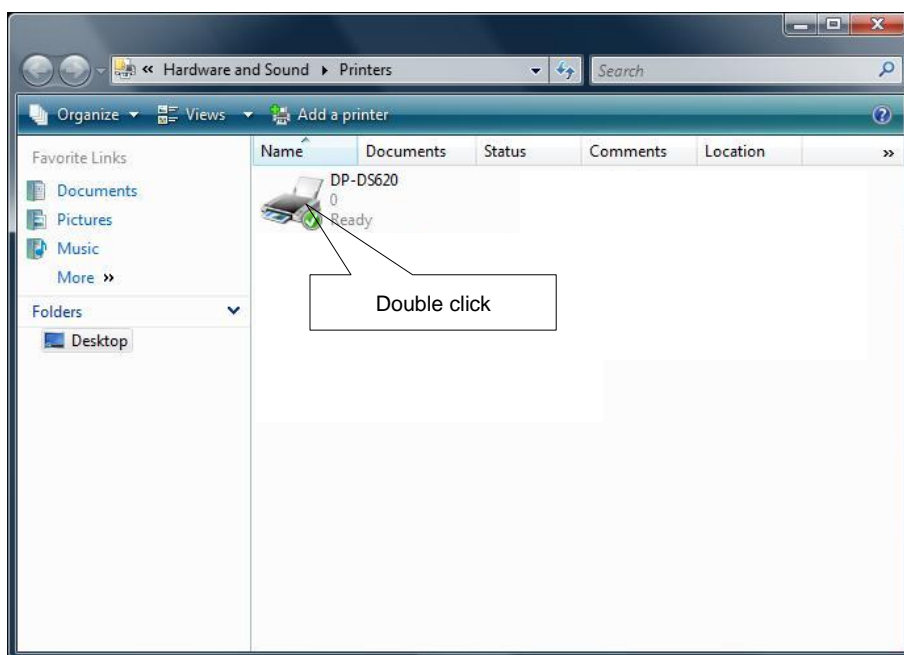

- 2) Click Start, and then click Control Panel. In Control Panel, click Printer. From the Printers screen, right click the DP-DS620 printer. From the menu, click Delete.

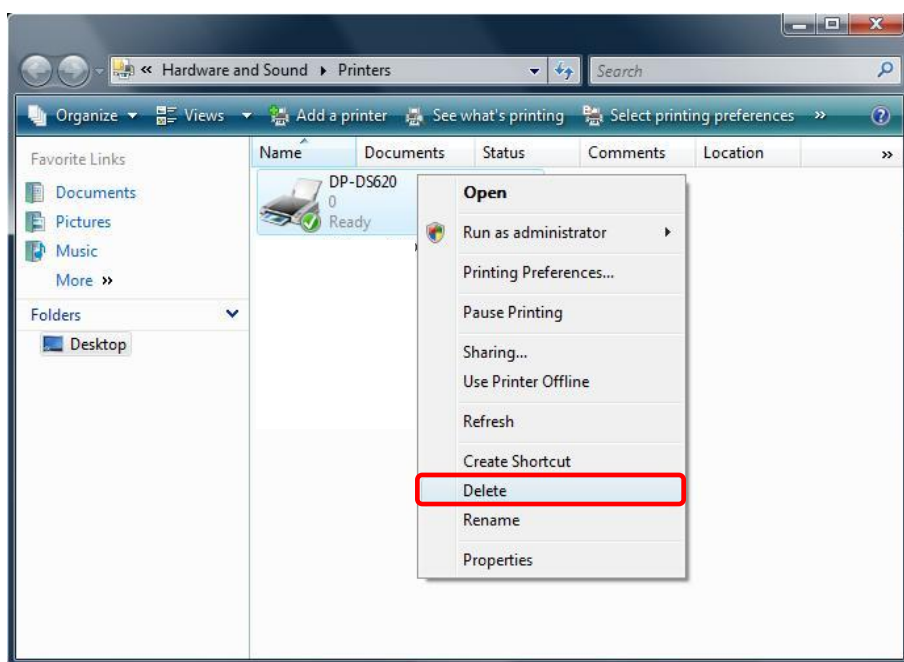


Figure 3.1 Right clicking the DP-DS620 at the Printers screen

- 3) The printer deletion confirmation dialog box appears. Click Yes.

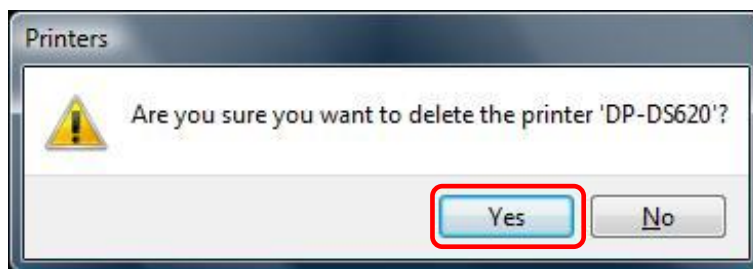


Figure 3.2 Printer deletion confirmation dialog box

- 4) After the DP-DS620 printer has been deleted, right click in an empty space to display a menu. From the menu, click "Run as administrator", and then click "Server properties..."

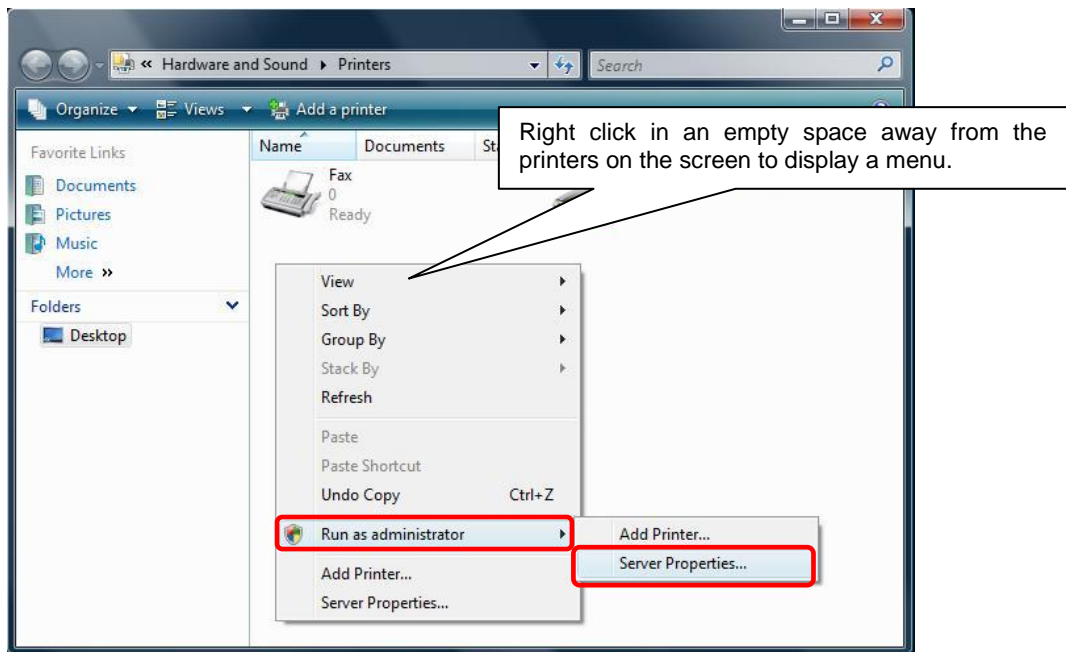


Figure 3.3 Selecting the menu displayed by right clicking at the Printers screen

- 5) Next, a User Account Control dialog box appears stating "Windows needs your permission to continue". Click Continue.
- 6) The Print Server Properties dialog box appears. Click the Drivers tab. From the installed printer driver list, select DP-DS620, and then click "Remove..."

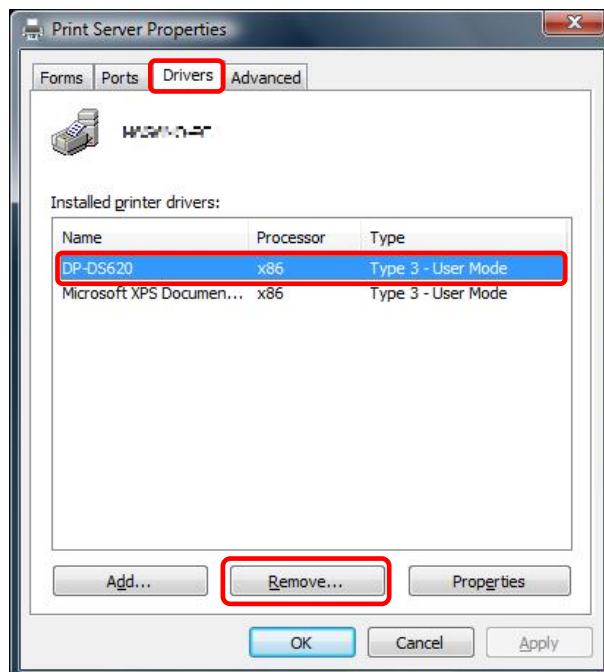


Figure 3.4 Print Server Properties dialog box

7) The Remove Driver and Package dialog box appears. Select "Remove driver and driver package", and then click OK.



Figure 3.5 Remove Driver and Package dialog box

8) The Print Server Properties confirmation dialog box appears. Click Yes.

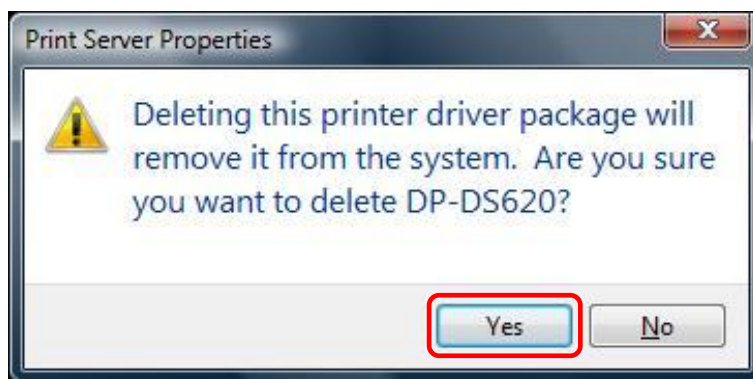


Figure 3.6 Driver deletion confirmation dialog box

9) The Remove Driver Package dialog box appears. Click "Delete".

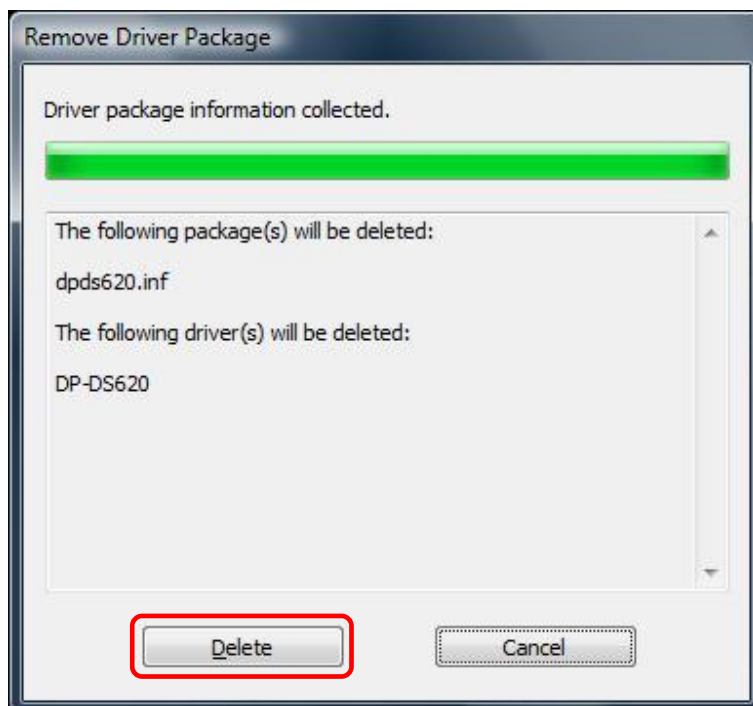


Figure 3.7 Remove Driver Package screen

10) The Remove Driver Package completion dialog box appears. Click OK.


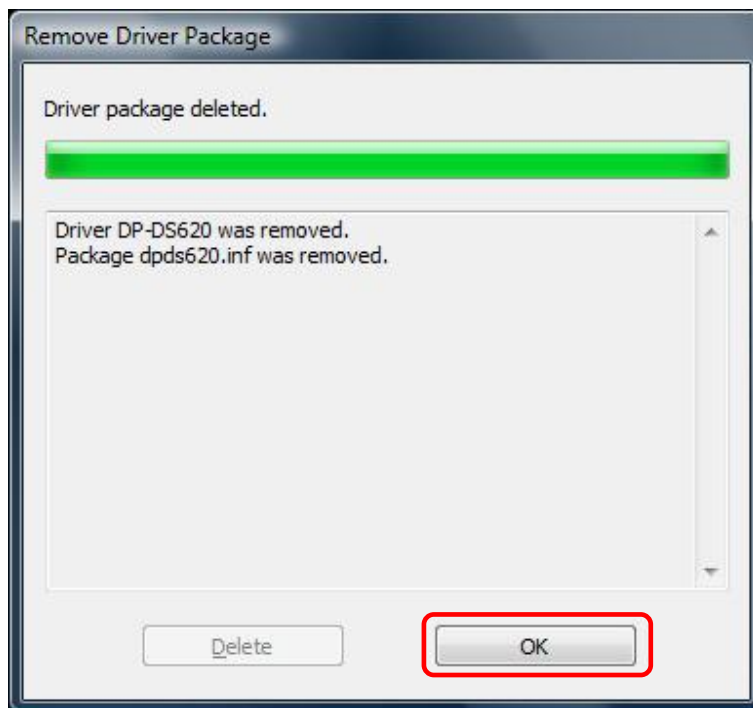


Figure 3.8 Remove Driver Package completion dialog box

Note) If the following error message appears, restart the computer. After the computer restarts, try to delete the printer driver again.

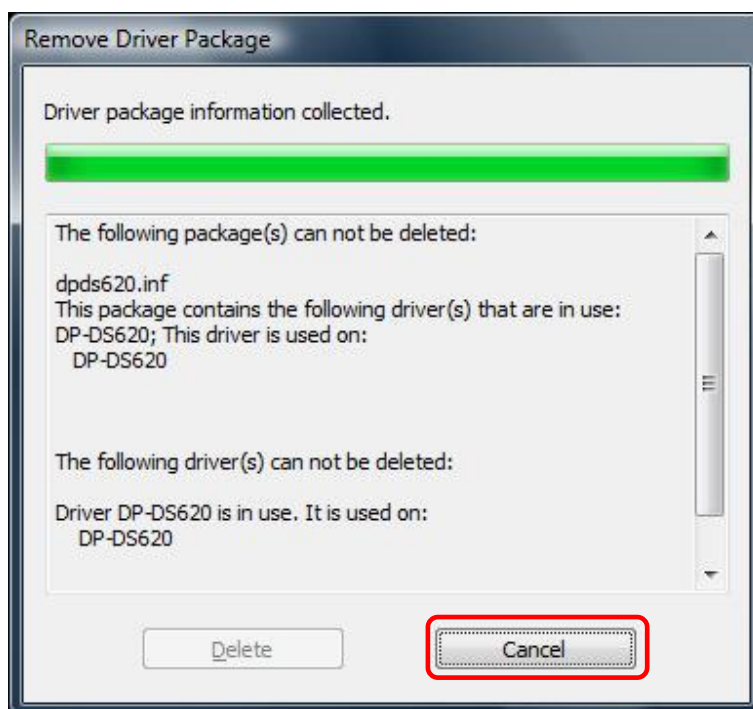

- 11) In the Print Server Properties dialog box, confirm that DP-DS620 was deleted, and then click Close. This completes deletion of the printer driver. After deletion, restart the computer.

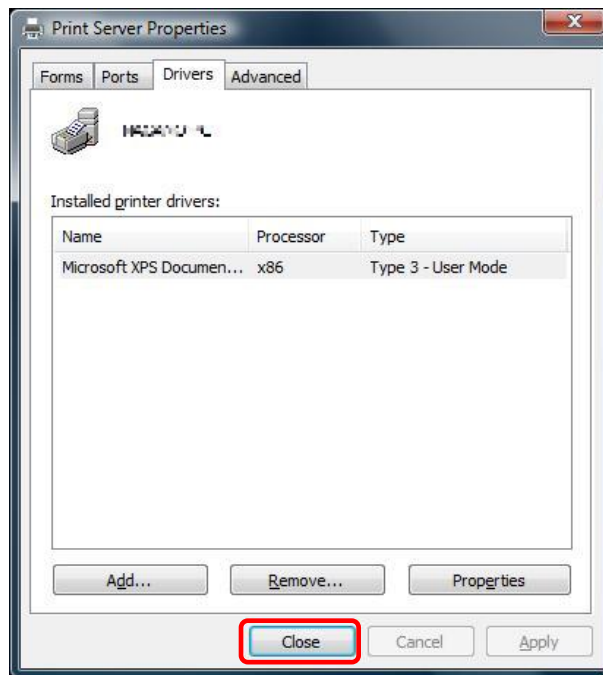


Figure 3.9 Print Server Properties

2. Install an upgrade for the printer driver

After deleting the printer and the printer driver, install the new printer driver. For the installation procedure, see "Chapter 1 Installation".

3. Restart the computer

After the installation of the printer driver is complete, always restart the computer. (Do not print just after installation. Always restart the computer once.)

Chapter 4 Delete the driver

For the procedure to delete the printer driver, see Chapter 3, “1. Delete the driver”.

Dai Nippon Printing Co., Ltd.