



SL620A-II: SnapLab Installation and Quick Start Guide

Contents

- Chapter 1 Warnings3**
 - Warning on power connection3
 - Compliance Notices3
 - FCC CAUTION3
 - For the customers in Canada.....3
 - Importer:4
 - Manufacturer:4
- Chapter 2 Installation.....5**
 - Box Contents.....5
 - Attaching the Tmini Terminal to the DS620A Printer.....6
- Chapter 3 Quick Start8**
 - Starting the DS-T6mini-II8
 - Change the Software Language by Default8
 - Make A Print Order.....11
 - Shutdown the SL620A.....15
- Chapter 4 Customizations.....15**
 - Photo Sources.....15
 - Setting up the WiFi image transfer for better functionality15
 - Controlling User Access16
 - For User-facing Retail Operation16
 - Add a Process Control for Checkout.....16
 - EVENT MODE16
 - Other Optional Functionalities16
- Chapter 5 Troubleshooting.....16**
 - Print jobs that do not complete16
 - Remote Support - TeamViewer16
 - Updates Online.....17
 - Technical Support.....17

Chapter 1 Warnings

To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.

To avoid electrical shock, do not open the DS-T mini and DS-Printer covers. Refer servicing to qualified staff only.

THIS EQUIPMENT MUST BE GROUNDED.

To disconnect the main power, unplug the AC IN connector.

Warning on power connection

Use a proper power cord for your local power supply.

1. Use the approved power cord (3-core mains lead)/appliance connector/plug with grounding-contacts that conform to the safety regulations of each country, if applicable.
2. Use the power cord (3-core mains lead)/appliance connector/plug conforming to the proper ratings (Voltage, Ampere).

Compliance Notices

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment under FCC rules.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION: Use shielded cables to connect this computers. Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

For the customers in Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This is a controlled document. To be sure you have the latest version of this Procedure, compare this document revision to the revision listed in the Document Control database. If you find this document is not current, discard and get the latest version from the Document Control database.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

NOM 121 – La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Importer:

DNP Imagingcomm America Corporation

4524 Enterprise Drive NW, Concord, NC 28027 United States

Manufacturer:

MTE Inc., Taiwan RoC

c/o DNP Imagingcomm America Corporation 4524 Enterprise Drive NW

Concord, NC 28027 United States




If you want to dispose of this product, do not mix with general household waste. There is a separate collection system for used electronics products in accordance with legislation under the WEEE Directive. For details, please consult with your dealer.


Chapter 2 Installation

Box Contents


The box contents:

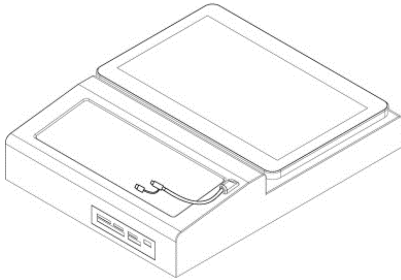


DT-T6mini II

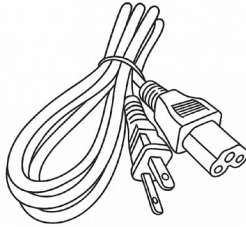


Power Cord

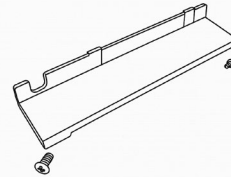

Rear Bracket with 2x **M3 screws**

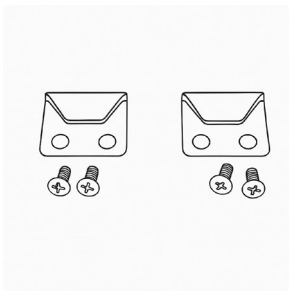

2 Front Hooks with 4x **M3 screws**

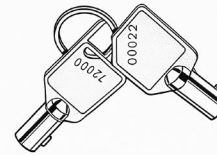


Keys for Card Reader
Contact Tech Support

Attaching the Tmini Terminal to the DS620A Printer


For a more secure installation of the Tmini SnapLab terminal it is recommended to use the included front and rear mounting hardware to attach the terminal to the DS620A printer. For more portability and mobility the mounting hardware is not needed.

1. Fix the hooks at the bottom of the DT-T6mini ii (front) using the provided screws.


Please remove the rubber part covering the area where the hooks will be placed before attaching them.

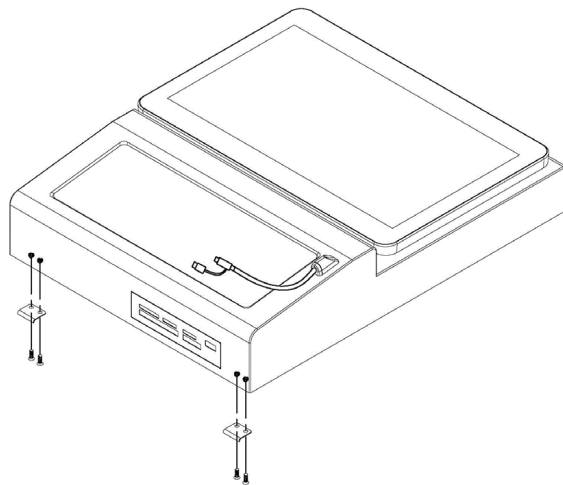

2. Open the printer drawer a few inches using the latch to unlock and pulling the drawer open.
3. Gently position the DS-T6mini-II on top of the DS620A.

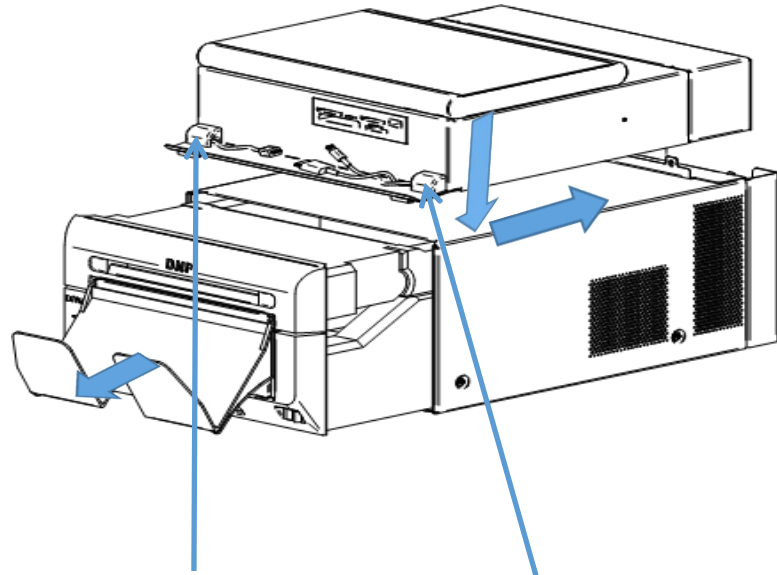

4. Slide the DT-T6-II backwards until the two front hooks engage with DS620 top cover.
5. Gently close the drawer mechanism.

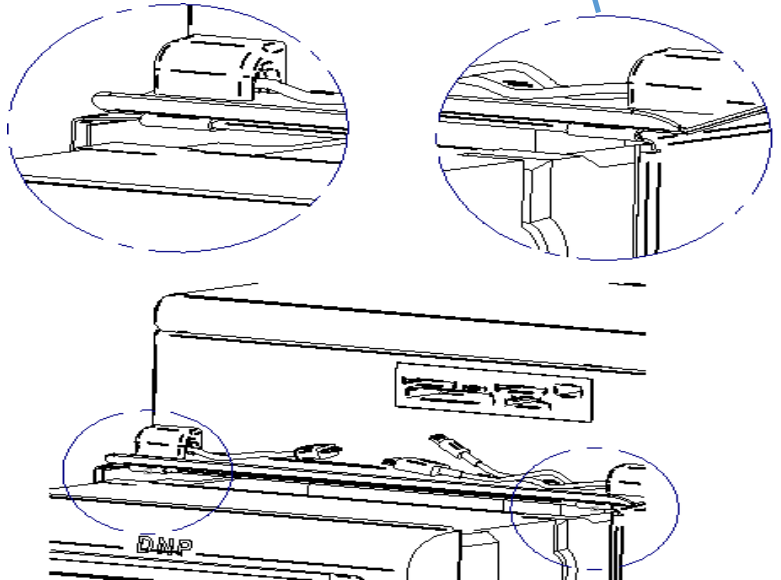

6. Use the two M3 screws supplied with the rear bracket to fix it to the back side of the DS-Tmini, and use the screws on the rear side of the printer to secure the two together.
7. Connect the power supply cable to the DS-Tmini.
8. Connect the power supply cable to the DS620A printer.
9. Connect the power supply adaptor to the Netgear Router.
10. Power up the printer.
11. Load the printer with media.
12. After the printer is ready, power on the SnapLab terminal.

Chapter 3 Quick Start

Make sure all power supply cables (Printer, Router and DS-Tmini) are connected.

Starting the DS-T6mini-II

1. Switch ON the DS620A printer.
 2. Load media into the printer (please refer to DS620A Quick Reference Guide).
 3. Switch ON the DS-Tmini (ON button is on the rear side).
- ➔ After a few minutes the Photo Editing Software will automatically start. The software will display only products that can be printed with connected printer and loaded media.

NOTE: If the DS620A Printer is not connected, the software will display the following message:


No products available. Please verify that the printers are properly connected to the system.

Change the Software Language by Default


1. Enter into **Main Panel** by touching in sequence the **lower left and right** corners of the monitor.



- Click the **Settings** button.

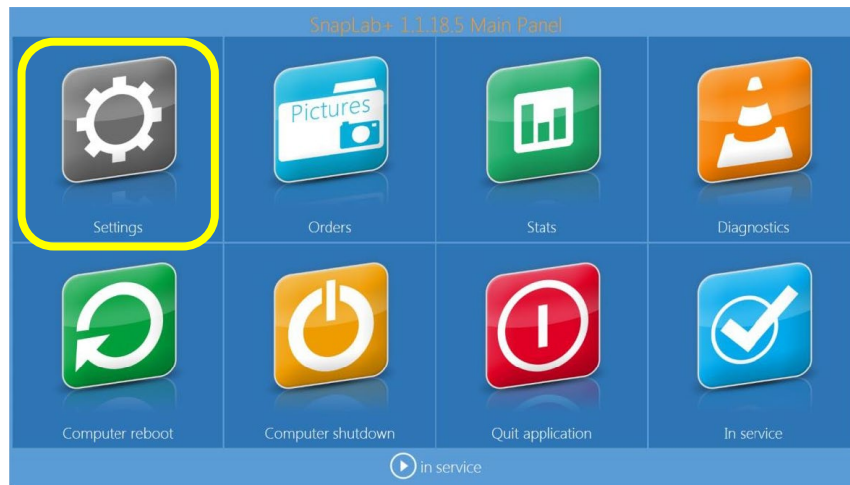

3. Choose **Settings > Language**.

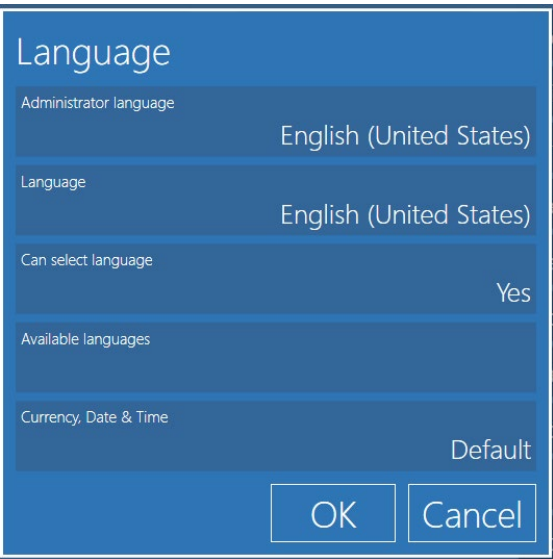

Available Languages	
Czech	Japanese
English	Polish
Finnish	Portuguese
French	Romanian
German	Russian
Greek	Spanish
Hungarian	Ukrainian
Italian	


- **Available languages:** The Photo Editing Software both editing & admin settings are available from the above list of languages.
- **Administrator Language:** Select the language to be used as default language for settings. You need to restart the software to have the new language in operation.
- **Language:** Select language to be used for user workflow.
- **Select language:** If set to **Yes**, user will be able to choose workflow language from the selection set with **Available languages** button.
- **Currency, Date &Time:** Ability to set your local currency, date and time.

NOTE: For additional setting customization, see Chapter 4.


Make A Print Order

This is the Workflow of creating and printing Single Sided Print product.

1. Select **Prints**.

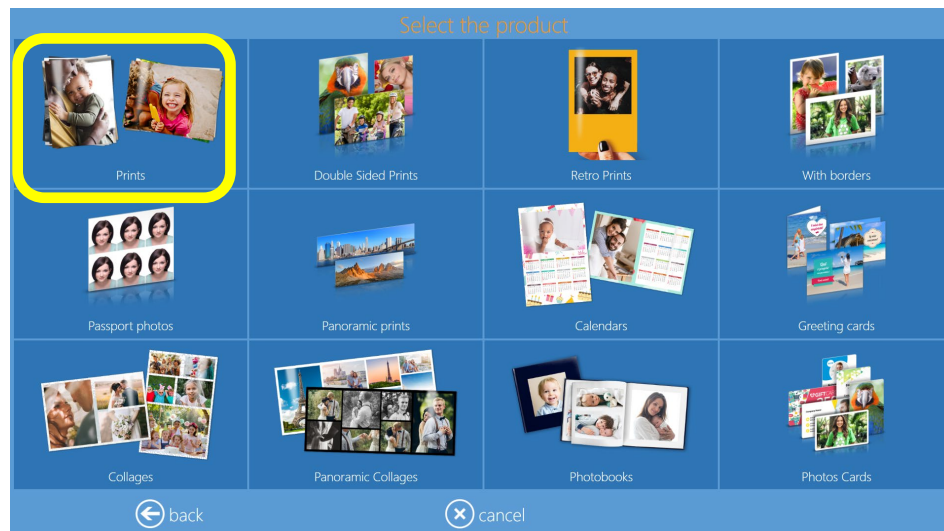


2. Select **Media** where images are located, as an example, the USB device.

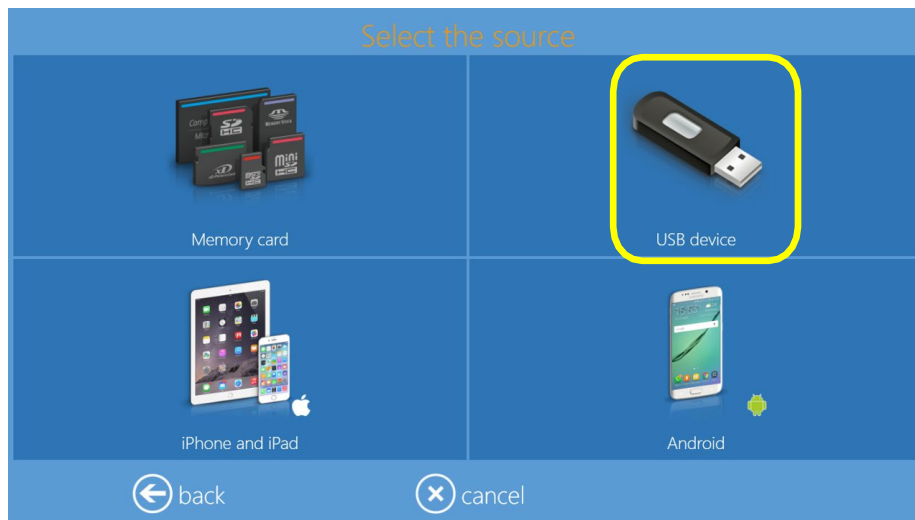

3. Select the **Images**. By pressing + or - sign the print quantity can also be entered at this stage.



4. Select **Print Size** and **Paper Finish** type.

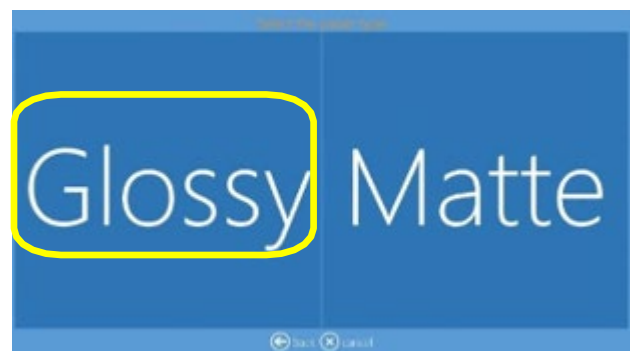


5. **Edit** print quantity, crop and enhance images, add text.



6. **Add Text.** To change text dimensions and rotation click and drag on rotation button.



7. **View the order summary.**

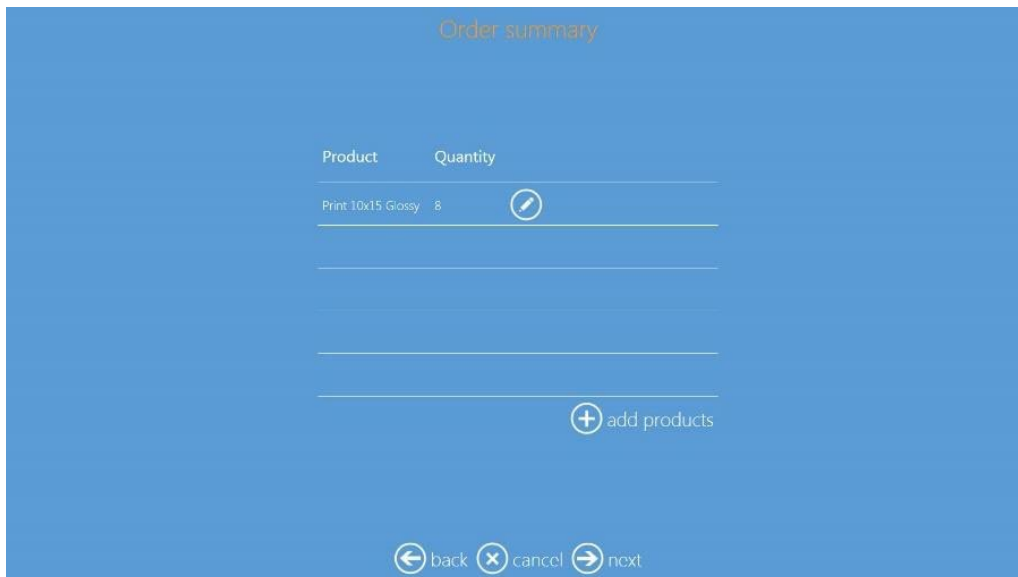

8. Enter the **Customer Name**.

Fill in your information

name



The image shows a blue screen with the text "Fill in your information" at the top. Below it is a label "name" followed by a text input field. At the bottom of the screen is a virtual keyboard with various keys including numbers, letters, and symbols. Below the keyboard are three navigation buttons: "back" (left arrow), "cancel" (X icon), and "next" (right arrow).

9. Press **Next** to finish the order.

Shutdown the SL620A

1. Enter into **Main Panel** by touching in sequence the **lower left and right corners** of the monitor.



2. Click on **Computer shutdown** button
3. Wait until DS-Tmini automatically switches OFF.
4. Switch OFF the DS620A printer.
5. Disconnect the power cables.

Chapter 4 Customizations

Photo Sources

The Photo Sources button in the Admin / Settings window allows you to turn on and off certain functions to suit your operating environment.

Setting up the WiFi image transfer for better functionality

- Connect the Snap Lab terminal to your in-house network using a Ethernet cable connection. This will enhance the user experience and also allow the use of the social media access to user images in the workflow.
- When the terminal is connected to the in-house network another image transfer feature can be enabled. The 4G/LTE transfer option can be enabled. in the Settings / Photo Sources menu. This function allows the end-user image to upload images to the terminal via the network without using the on-board WiFi. It's done by scanning a QR code that appears on the kiosk screen and opens a photo picker and transfer window on the user's phone.

NOTE: The WiFi in the kiosk only supports the Snap Lab app image transfer functions. It cannot support a network connection. An Ethernet cable to the kiosk is necessary for network access. In other words, the WiFi does not support both local image transfer from the user cell phone and an in-house WiFi network connection, they must be connected separately.

Controlling User Access

For User-facing Retail Operation

- Limit the end-user access and prevent unwanted setting changes. Access the Settings/ System Passwords. add a password for the Owner and another password the Operator.

NOTE: Be sure to write down the passwords and store it in a safe place for future access to the settings of system.

Add a Process Control for Checkout

The default out of the box setting is no process control, the honor system, any print job will print as soon as it is completed.

There are several checkout options to choose from - simple and complex. e.g. add a check-out password (it should be different than the system admin setting access passwords); or requires the addition of an external USB keyboard behind the counter.

EVENT MODE

The SnapLab Kiosk has an alternate mode of operation to for owner operator functions (not end-user facing) this mode allows the workflow to be streamlined. It can turn off unnecessary steps or disable certain photo sources, or it can set photo print limits; it can also set a default customized photo frame to be added on every photo for an event.

Refer to the full user manual on the DNP website for more information.

Other Optional Functionalities

The Snap Lab Kiosk can support the addition of an external Flatbed scanner; the addition of the necessary driver may be required. Contact Tech Support for assistance.

Chapter 5 Troubleshooting

Print jobs that do not complete

Check that the print media is loaded and the printers are Ready, not in error status. Check the status of the lights of the printer and check the Printer Status button in the Admin Diagnostics window.

Use the Diagnostic to check various features of the system. Refer to the User Guide or contact DNP tech support.

Restarting the PC may resolve some operational issues.


Remote Support - TeamViewer

The SnapLab Pro system is equipped with technology to allow remote access support by DNP technicians. This feature allows a DNP technician to access the terminal remotely to assist the users in troubleshooting and resolving operational issues.

Th TeamViewer feature requires the terminal to be connected to the internet. The TeamViewer functionality is only enabled when the system administrator activates it. It is otherwise inactive. Contact DNP Tech Support to determine if remote support may be helpful to resolve operation issues with the terminal.

Updates Online

The system supports app updates online. Use the Diagnostics function / Check for Updates button. The system will 'phone home' and retrieve any updates. The terminal must be connected online to the internet for this to operate. The feature is effective on feature updates for up to one year after system activation. Updates can also be installed locally via USB memory device.

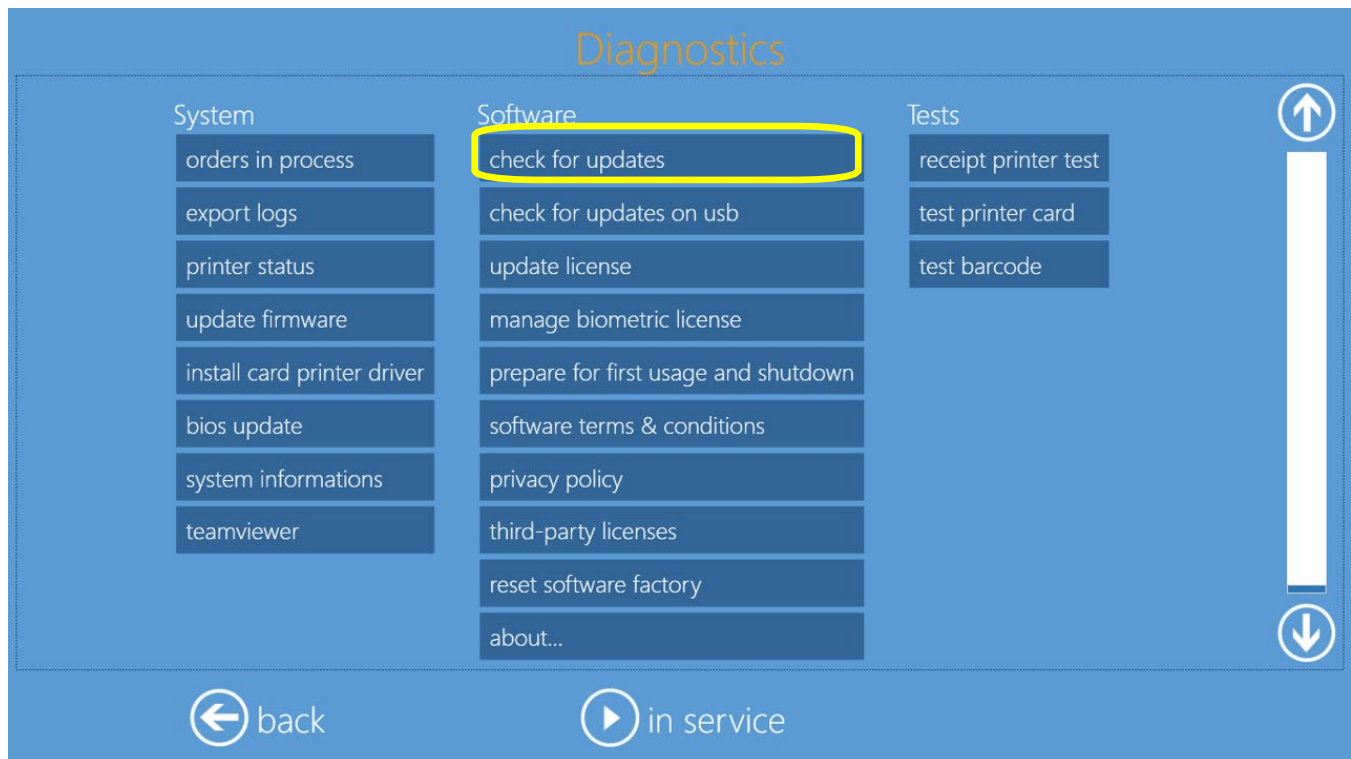

Technical Support

Technical Support Contact Information and Regular Business Hours of Support

Phone US and Canada: 1-855-367-7604 or +1-980-777-1178

Phone Latin America: 1-855-367-8008 or +1-980-777-1175

Email: dnpsupport@dnpiimgcomm.com

DNP Imagingcomm America Corp.

4524 Enterprise Drive NW

Concord, NC 28027

Phone: 704-784-8100

Fax: 704-784-7196

www.dnpiimgcomm.com www.dnpphoto.com